



VELO DE VILLE

REVO-C

QUICK START GUIDE



QUICK START GUIDE

CONTENTS

VELO DE VILLE REVO-C	2
AVINOX control unit	4
Before you start	7
AVINOX App	8
VELOMATE	9

VELO DE VILLE REVO-C

Technology meets urban style.

Modern, low-maintenance and smartly equipped, the REVO-C is made for the city. With clean lines, clever features and reliable performance, every ride becomes a statement in everyday urban life.



AVINOX SYSTEM

AVINOX M1 MOTOR

Peak 1000 W
105 Nm torque
120 Nm Boost
max. Speed 25 Km/h

AVINOX BATTERY

600 Wh capacity

For further information about the components of your REVO-C, please refer to the dedicated parts list.

VELO DE VILLE REVO-C

Luggage rack
Urban Light - max. 10 kg
VDV Gravel - max. 18 kg

opt. integrated
ABUS ICS lock for
lock chains

Cockpit
Handlebars
Brake levers
Controls
Gear levers

Rear light

Front headlights



AVINOX Charging port

Assistance control

Menu navigation

AVINOX Touch Display



AVINOX control unit

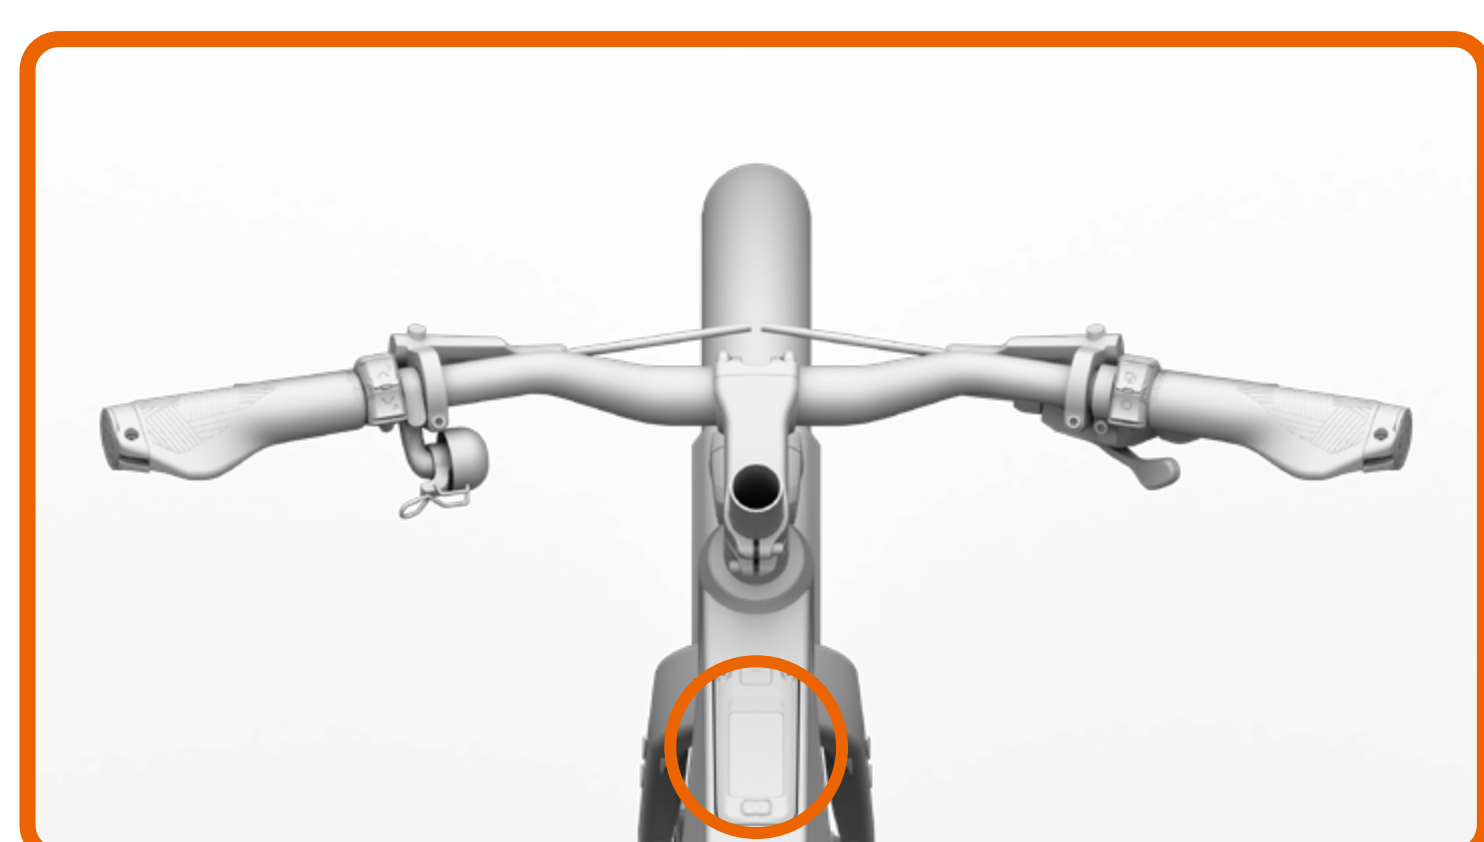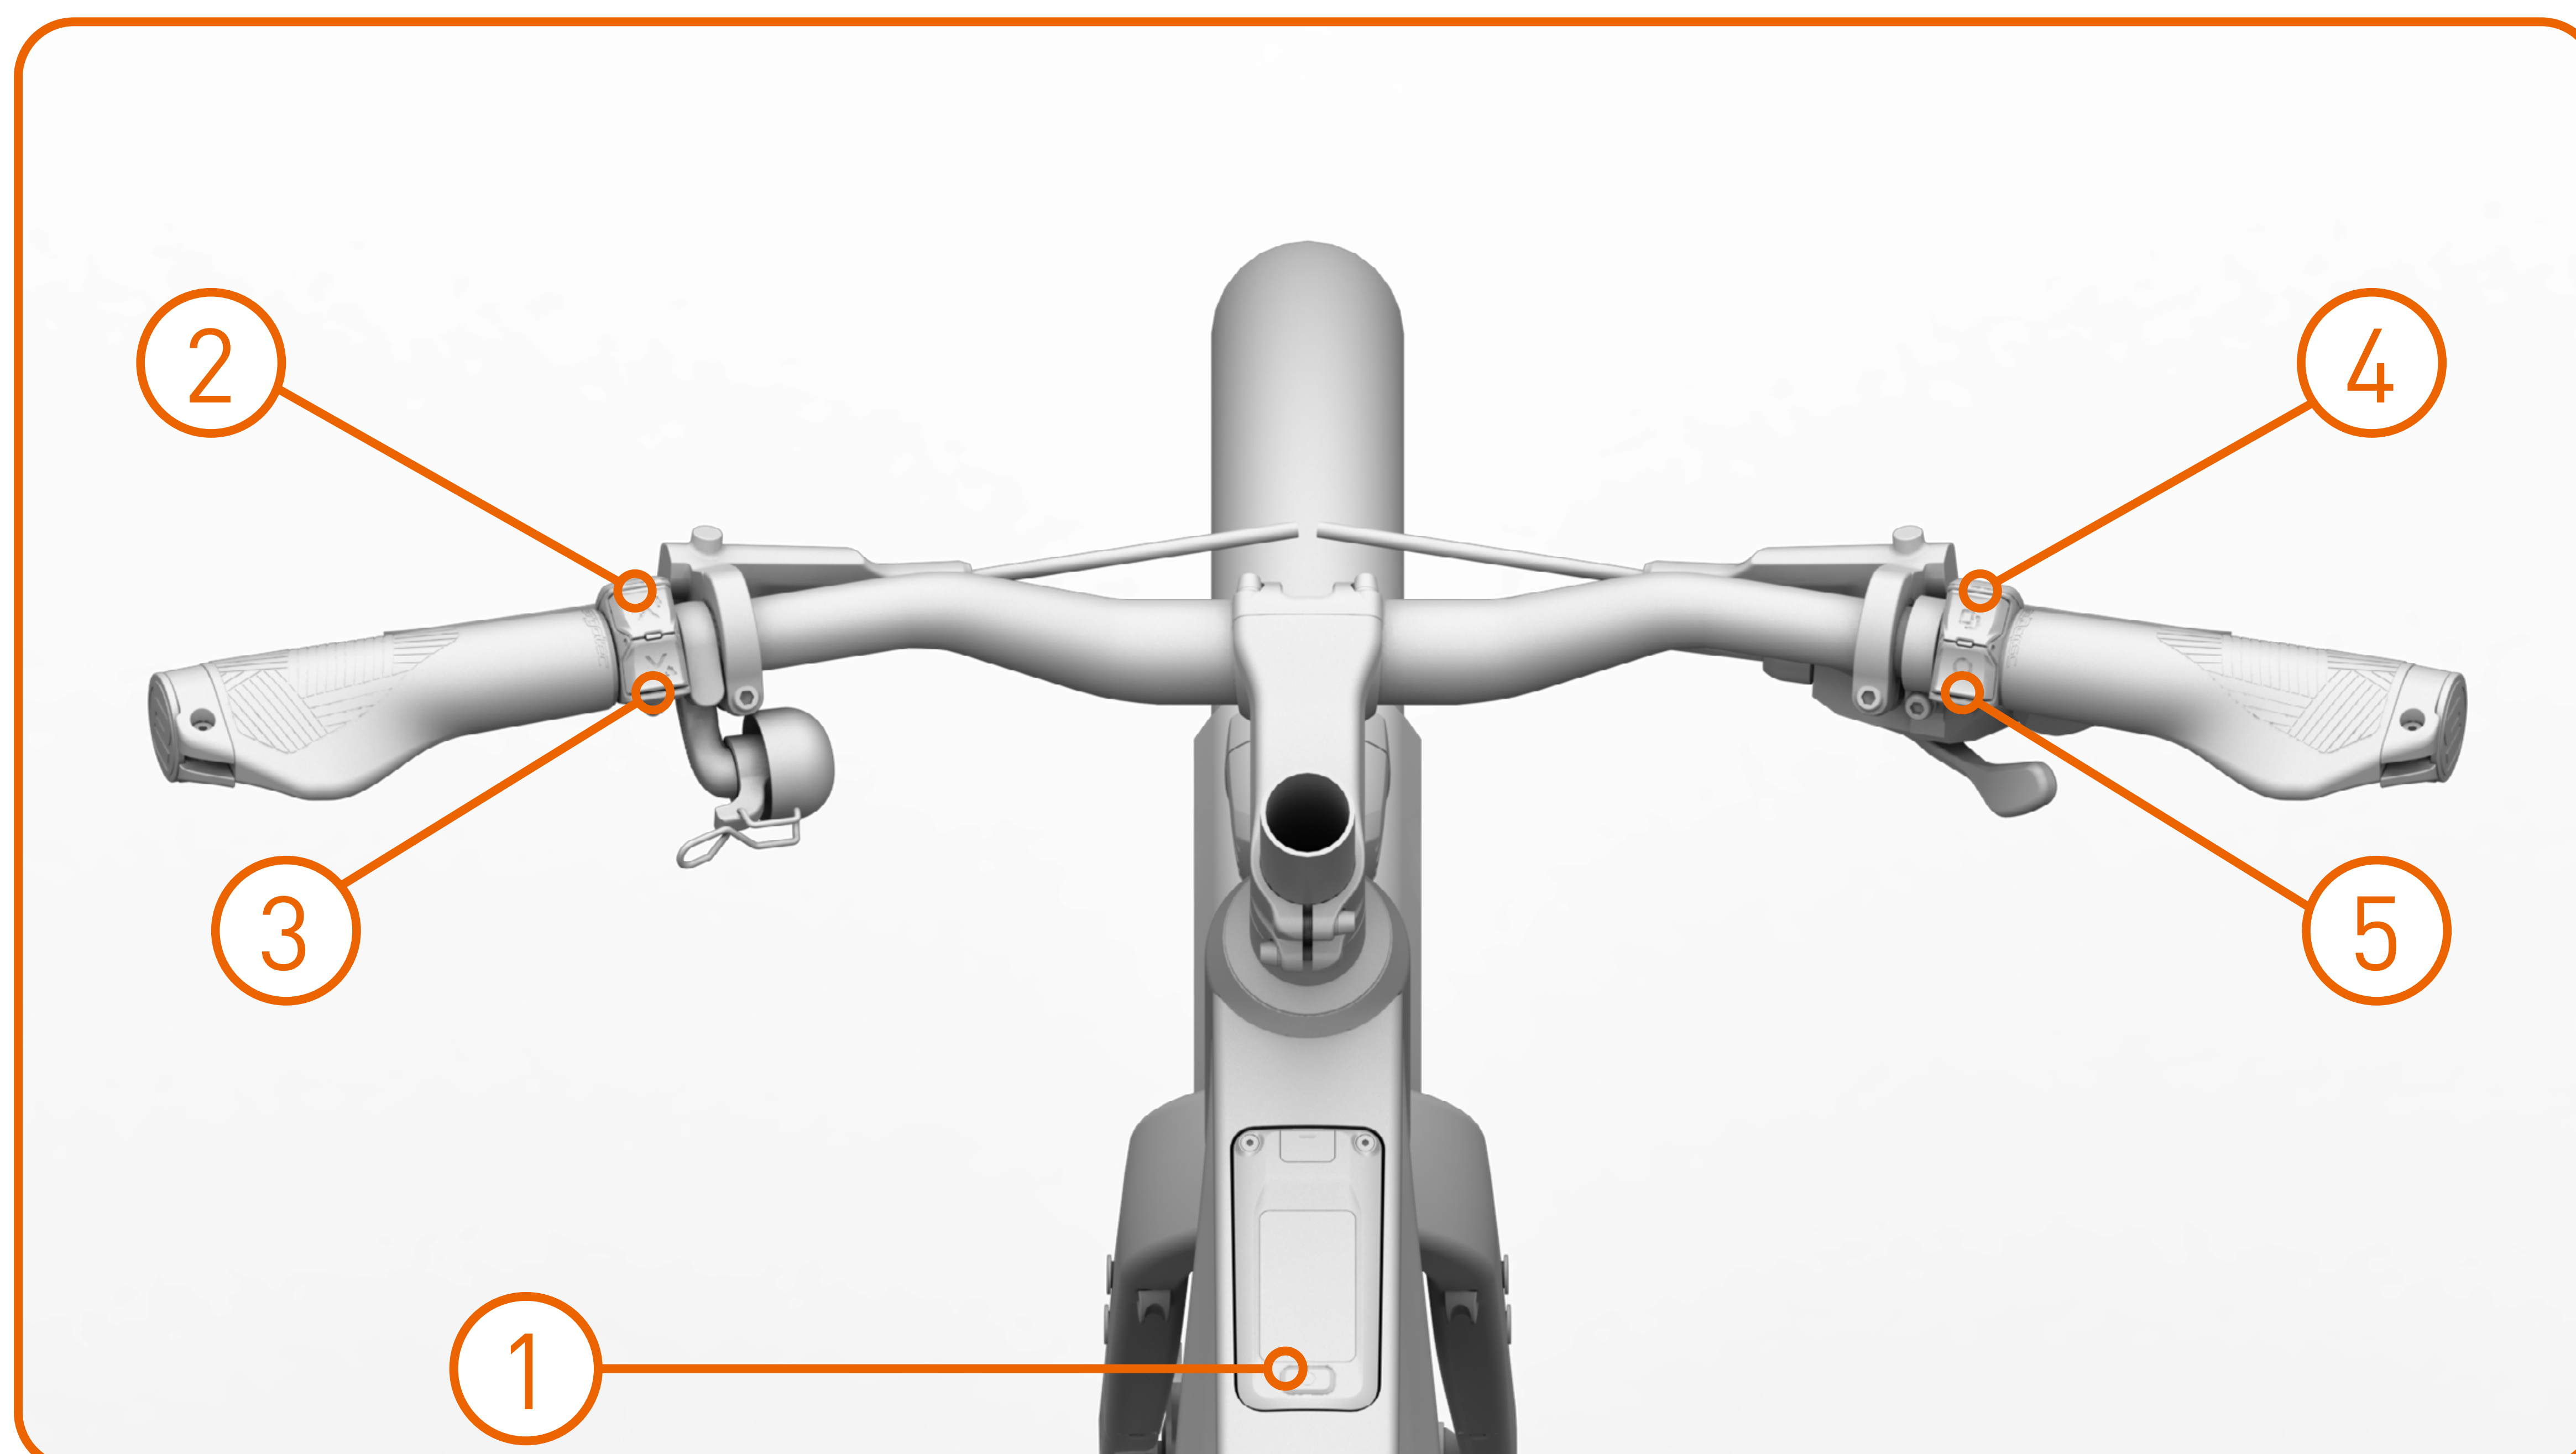

- 1 On/Off button**
- Press and hold to turn on and off. Press and hold for 20 seconds to force shut down.
 - When turning on for the first time, follow the on-screen instructions to select your language and activate the system.
 - Press to switch between Off, Auto, Eco, Trail, and Turbo support modes after turning on.

- Operation of the control display**
- After switching on the control display, it will show the home screen. Tap or swipe on a screen to interact with the control display.
 - Home screen: Shows basic information.
 - Swipe left/right: Opens the pages with the ride data, which can be customised in the app.
 - Swipe up: Opens the settings to add accessories, set the recording mode, etc.

AVINOX control unit

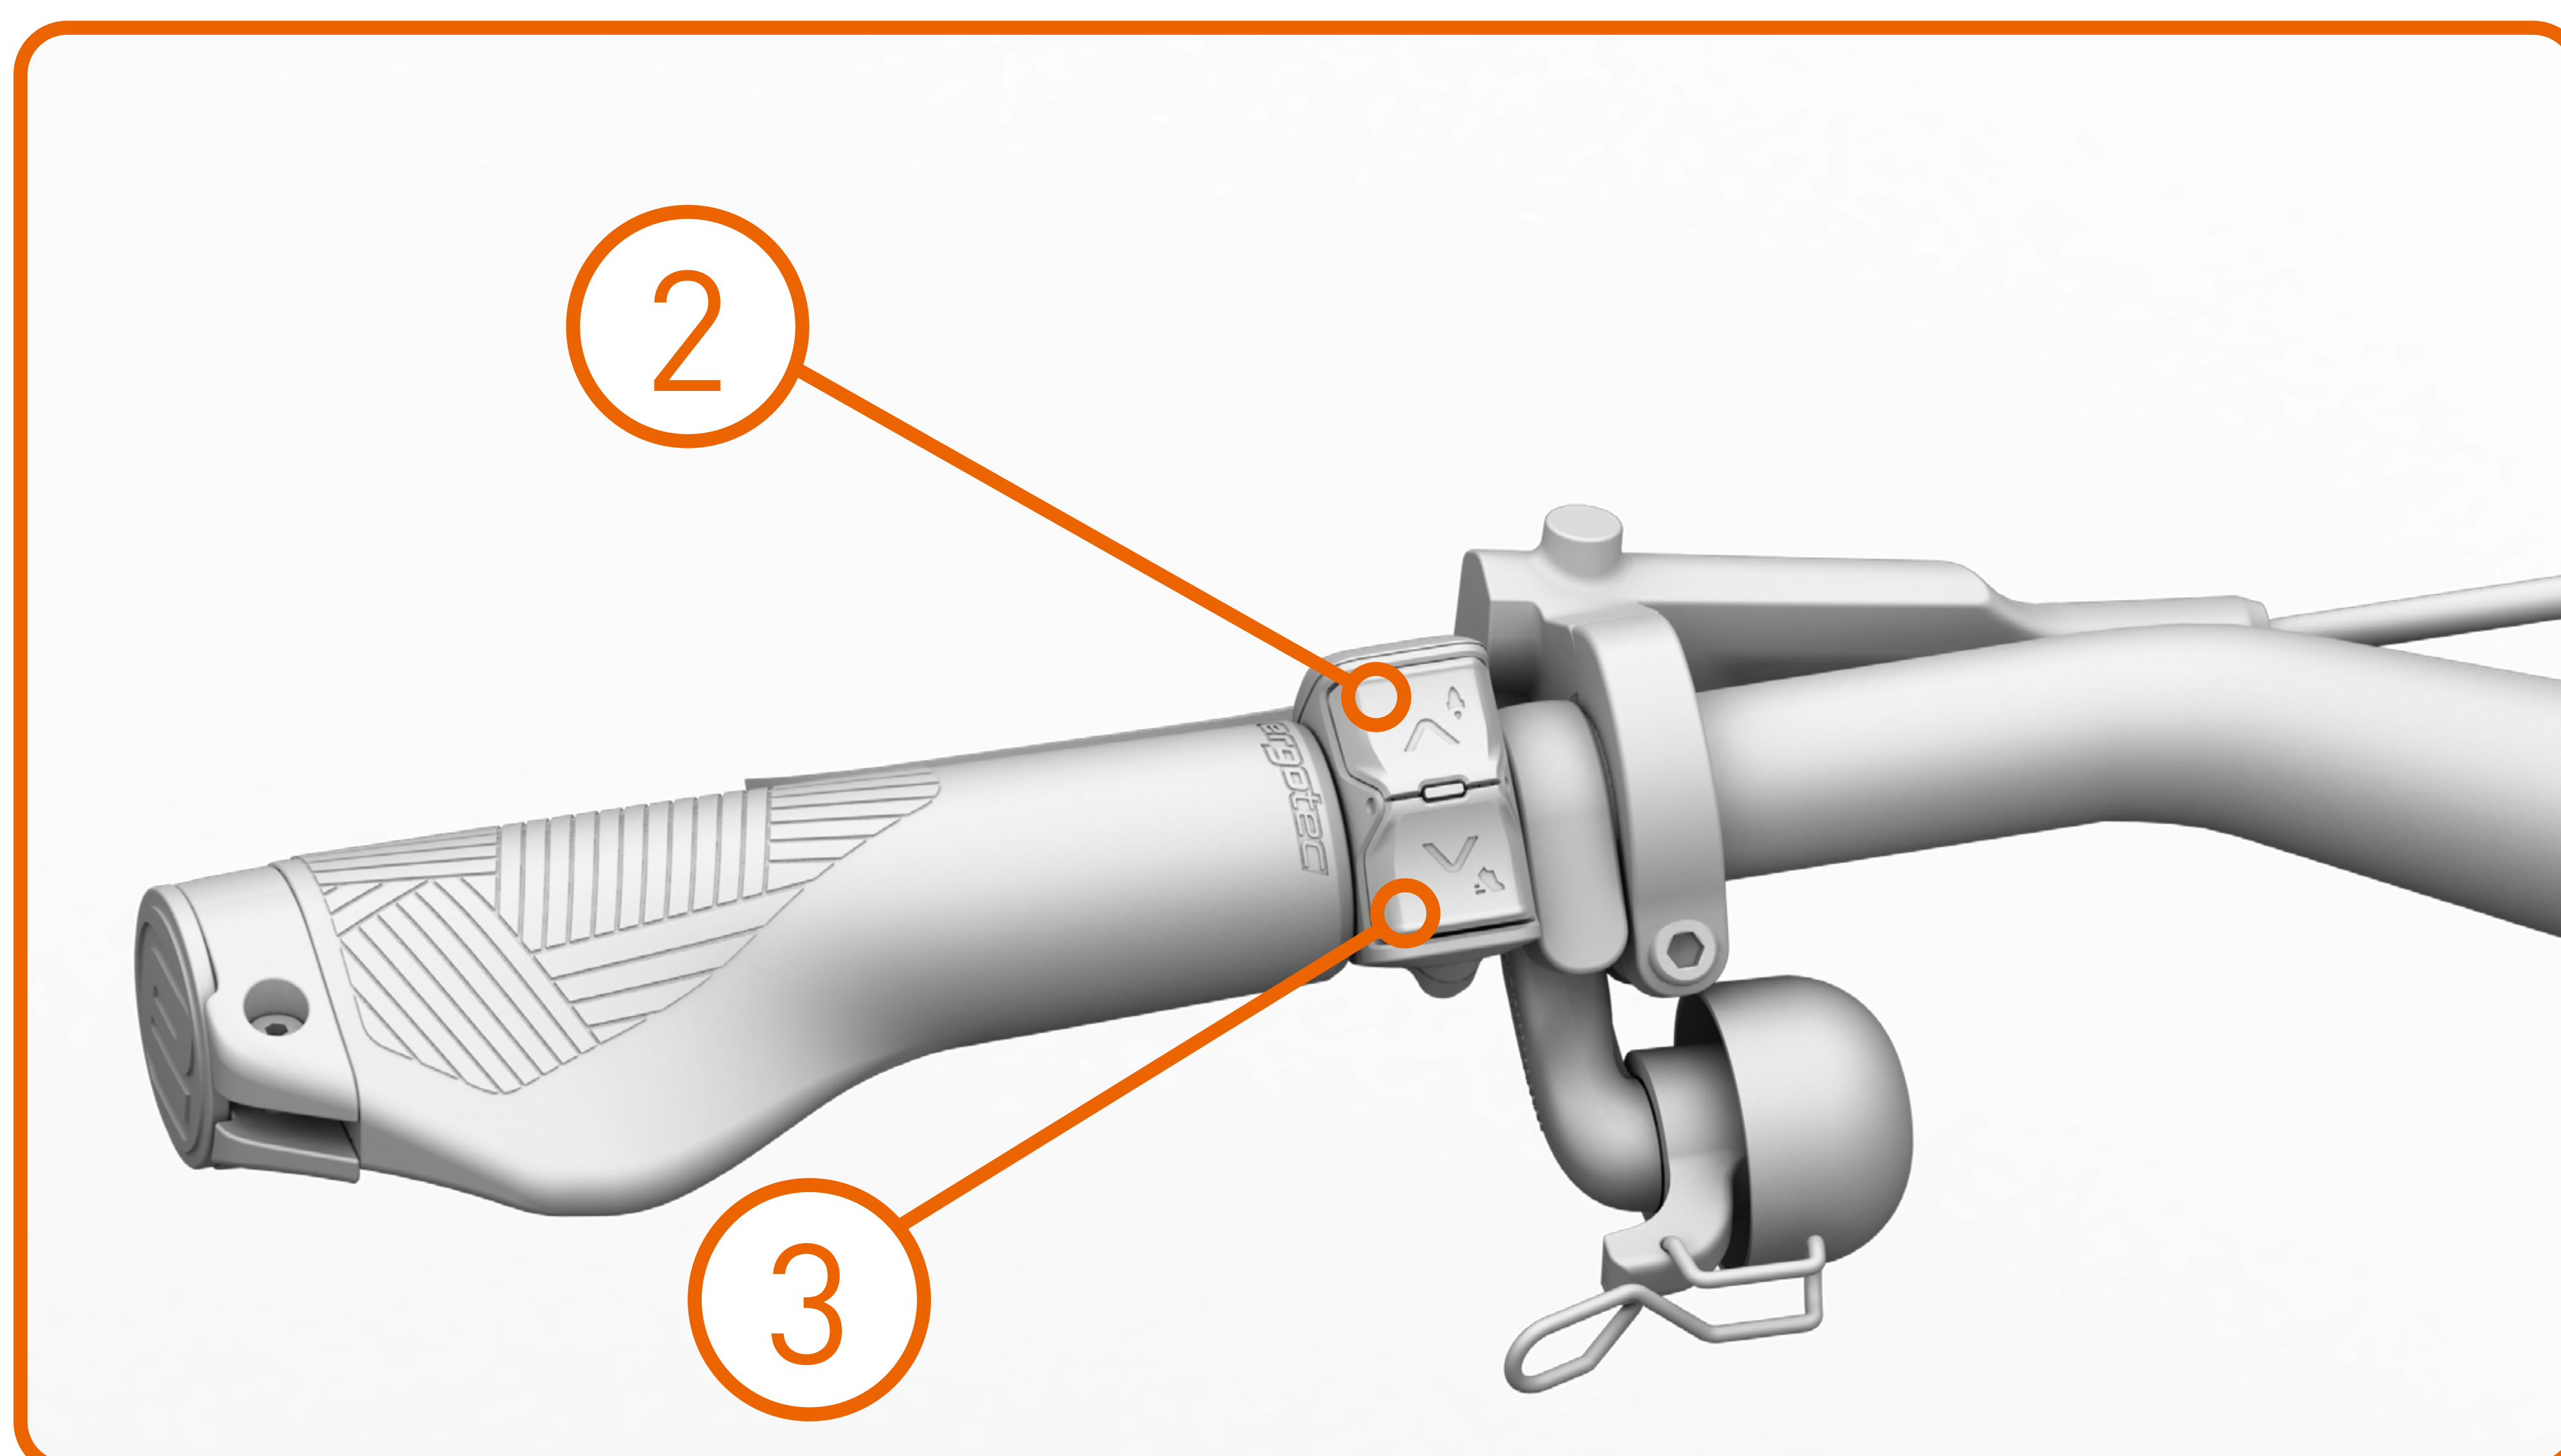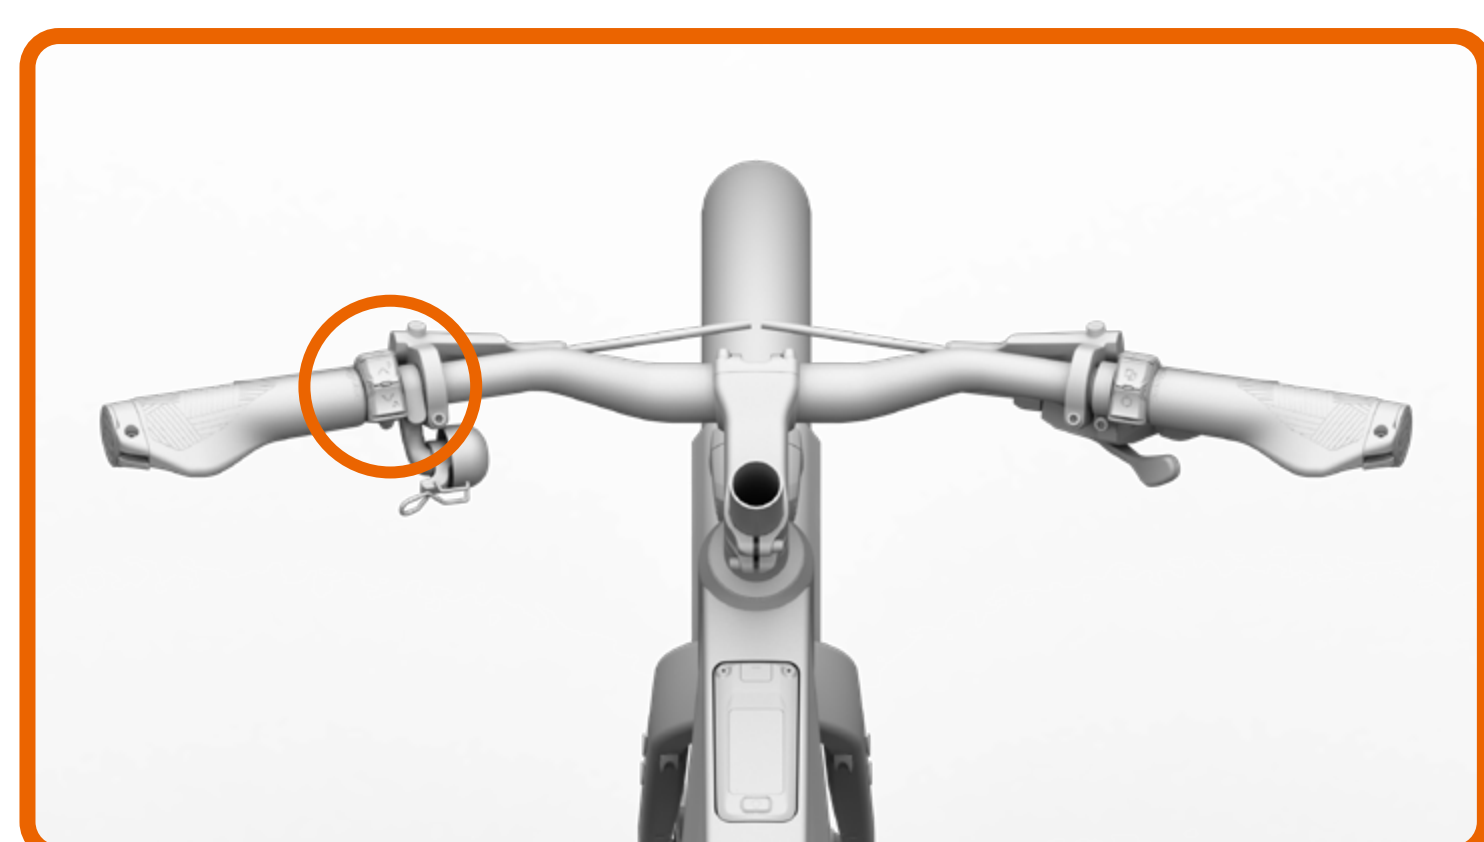



② ^ Button to increase the level of assistance

- Press to cycle through the support modes in the following order: Off > Auto > Eco > Trail > Turbo.
- Press and hold to activate Boost mode. The bike screen will then display a countdown.
- Press the power button or the buttons to increase/decrease the support level to exit Boost mode.

③ v Button to reduce the level of assistance

- Press to switch between support modes in the following order: Turbo > Trail > Eco > Auto > Off.
- Press and hold the button, then release it to activate Walk mode. After activating the mode, press and hold the button to receive power assistance when pushing the bike uphill.
- Press any button to exit Walk mode.

AVINOX control unit

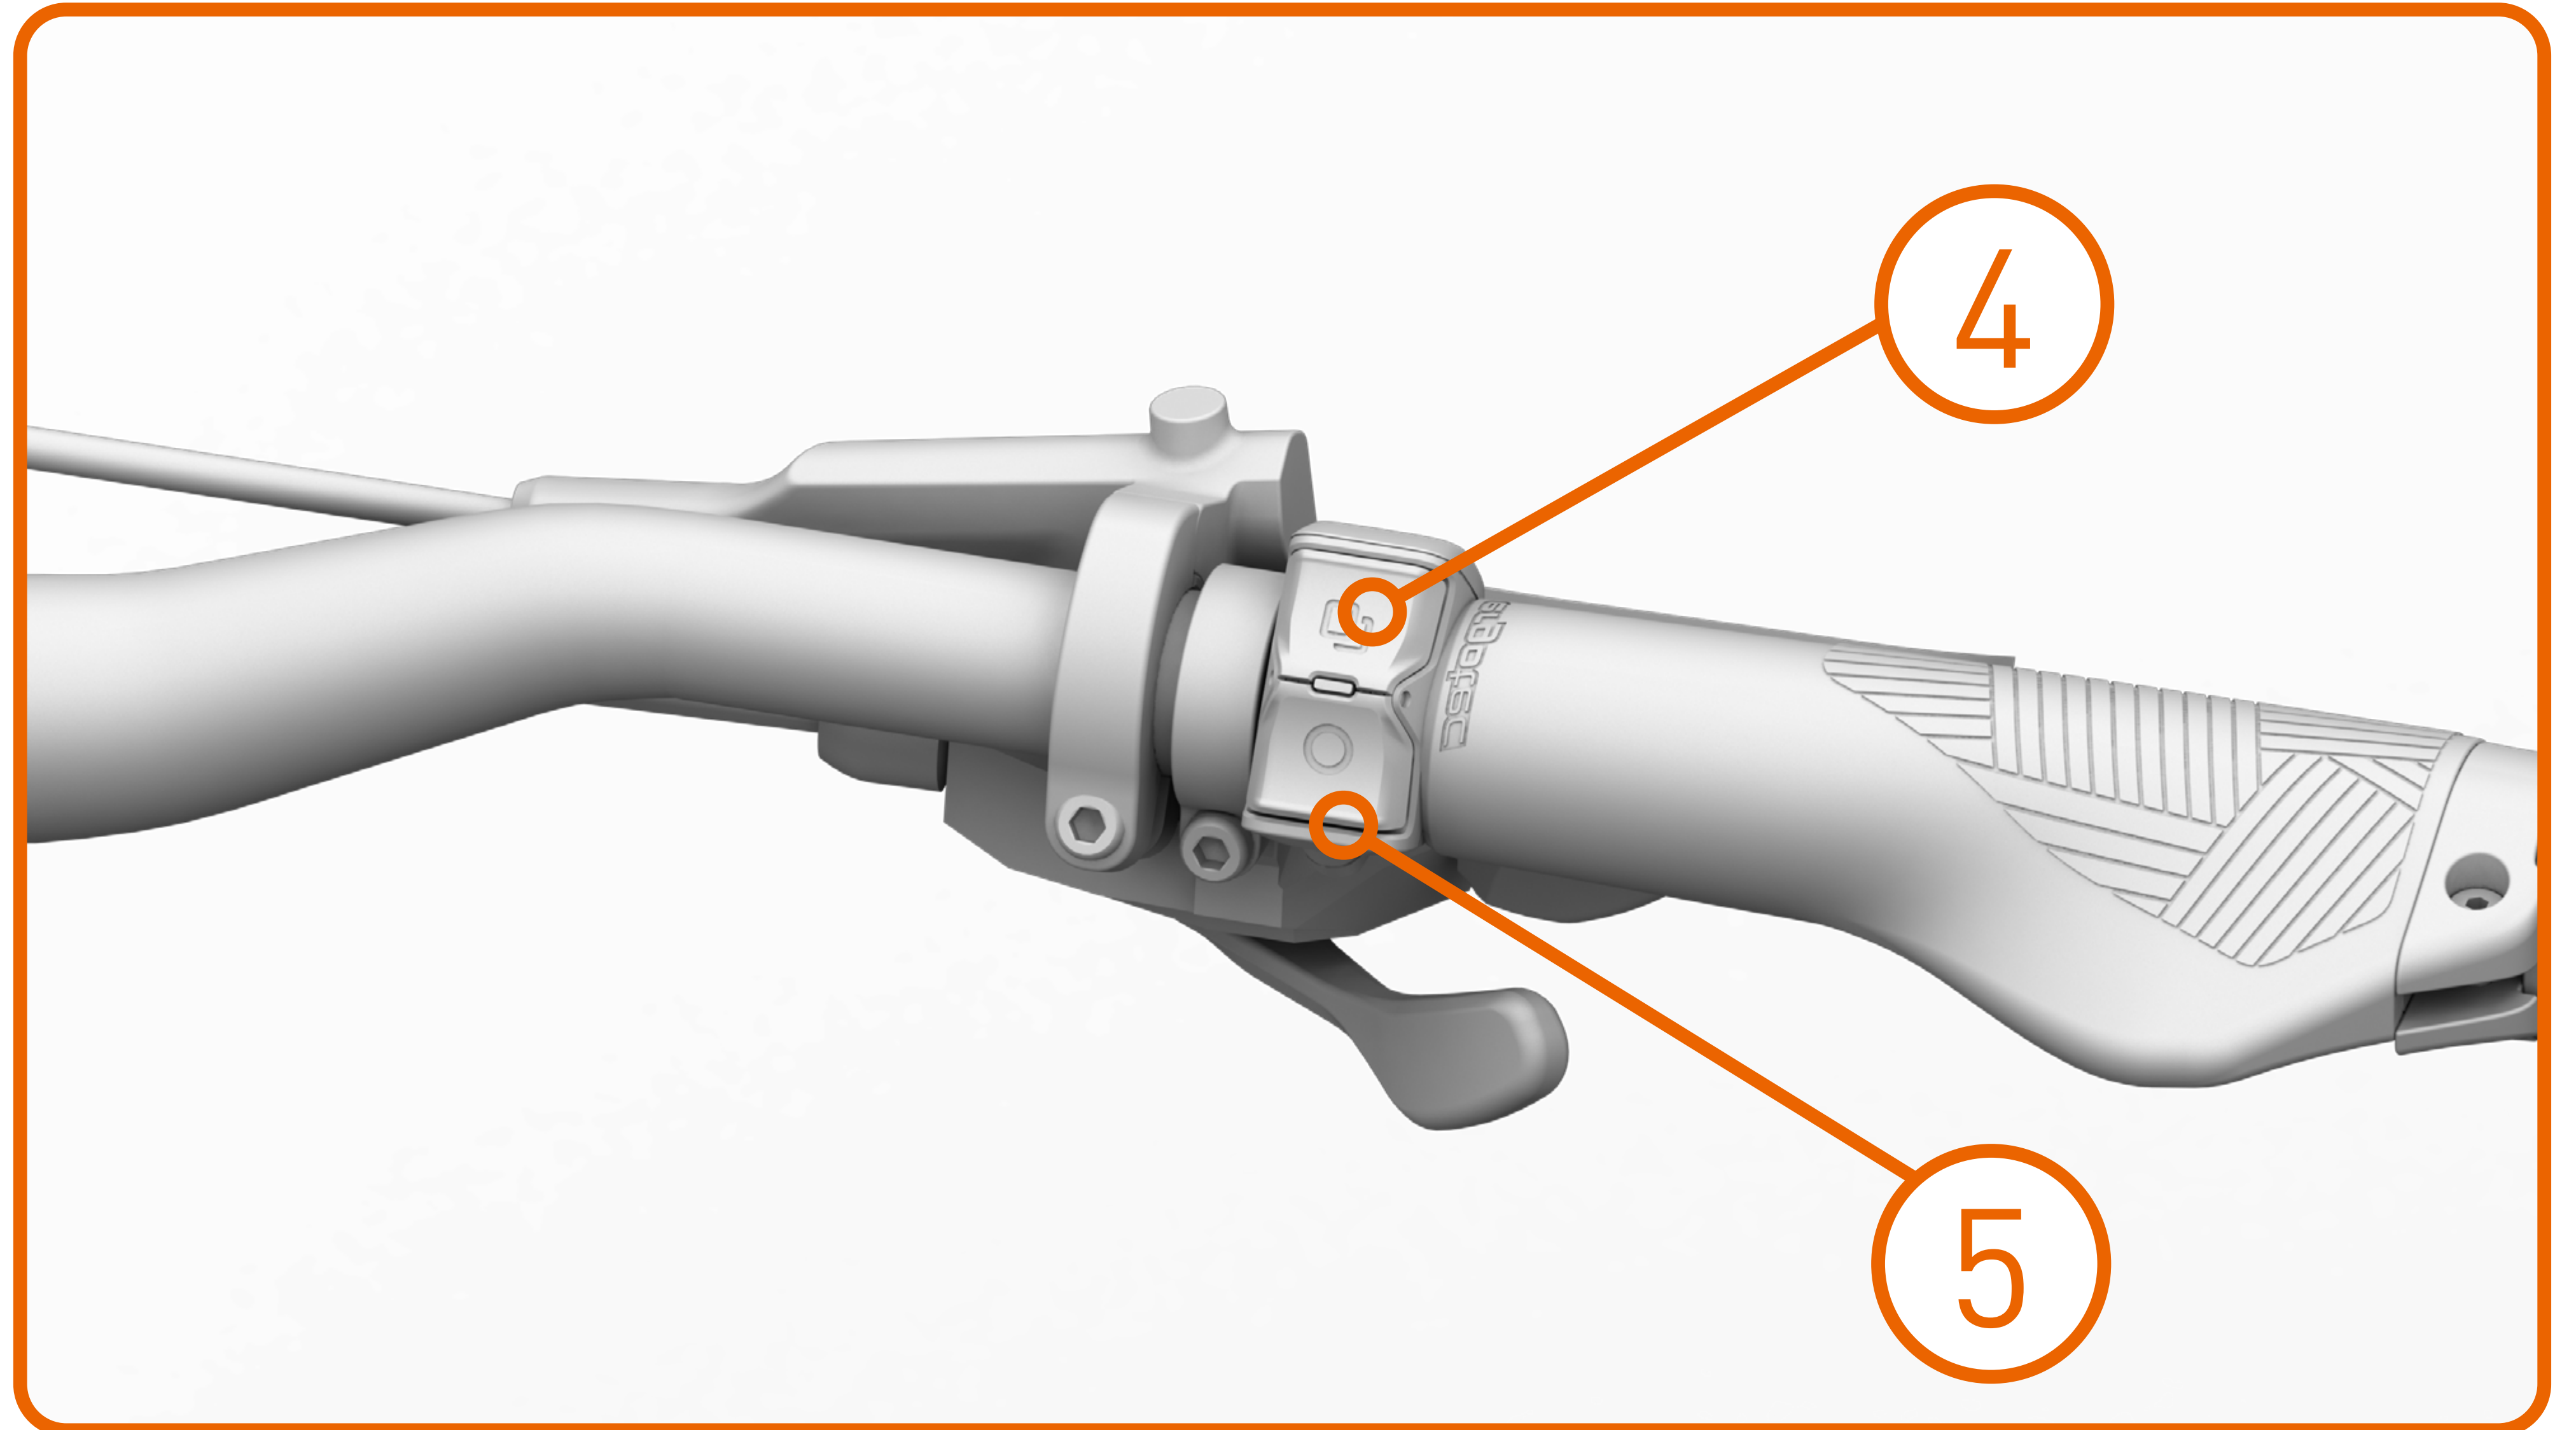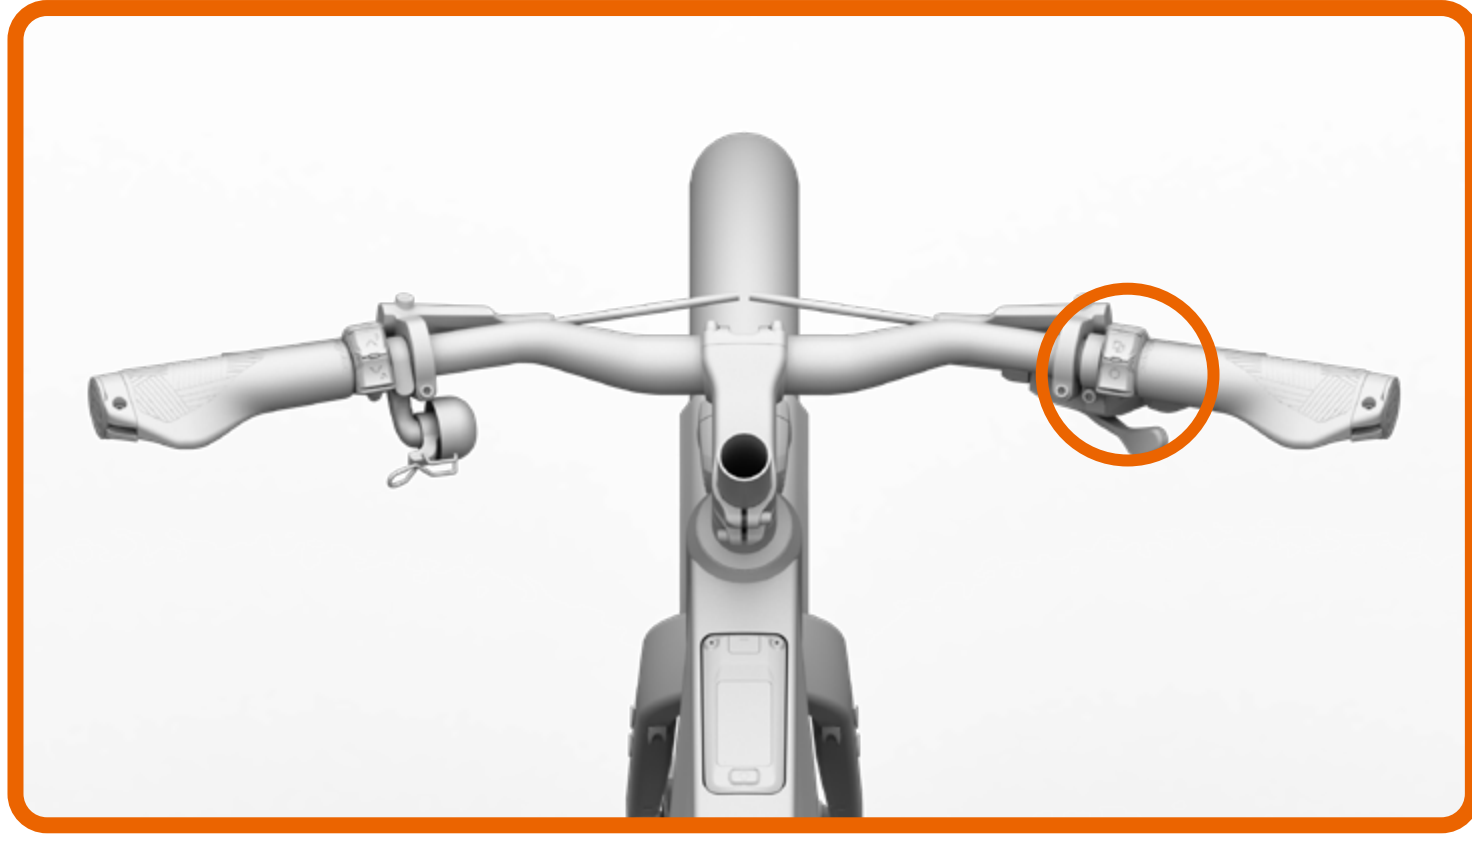

4 Button for switching the screen (customisable)

- Press to move the bike screen to the right.
- Swipe up on the bike screen to open the settings. You can then customise the functions for the buttons under 'Customise controls'.

5 Functions key (customisable)

- Press to move the bike screen to the left. When the settings page is open on the bike screen, press again to return to the previous page.
- Swipe up on the bike screen to open the settings. You can then customise the functions for the buttons under "Customise controls".



Before you start

Check tyre pressure

Check the air pressure in your tyres regularly, ideally once a week. The air pressure should be within the range specified by the tyre manufacturer. Low air pressure increases driving comfort through better cushioning, while higher air pressure reduces rolling resistance and improves range.

Functional testing of the brake system

Before each journey, check that the brakes are working properly. Apply the brake levers and check that the vehicle (REVO-C) cannot be moved any further. If the vehicle can still be moved despite the brakes being applied, the brake system must be professionally adjusted at a qualified workshop.

Battery charge level and range

Ensure that the battery is sufficiently charged to cover the desired distance with electric assistance from the AVINOX motor. Regularly checking the charge level ensures a trouble-free riding experience.

Check lighting equipment

Before setting off, check that all mandatory lighting equipment (headlights, rear lights, reflectors) is in working order and correctly fitted. If any of the lights are defective, the vehicle may only be used during daylight hours and in good visibility conditions. Repairs should be carried out immediately.

Wearing a bicycle helmet

For your own safety, wearing a roadworthy and undamaged bicycle helmet is strongly recommended on every ride. The helmet should fit correctly, not slip, and be replaced in the event of a fall, even if there is no visible damage.

For further and detailed instructions and information, please refer to the **VELO DE VILLE original operating instructions** for the VELO DE VILLE REVO-C.

AVINOX APP



The AVINOX app supports you in using the REVO-C with helpful functions such as:

Ride information
GPS tracking
Smart navigation
Statistics
Theft protection
Fitness tracking
Motor performance

You can install the AVINOX app on your smartphone via the [App Store](#) and [Google Play](#):




AVINOX APP
in the APP Store



AVINOX APP
on Google Play

For further and detailed information, please visit the official website of the AVINOX SYSTEM manufacturer:
www.avinox-ebike.com

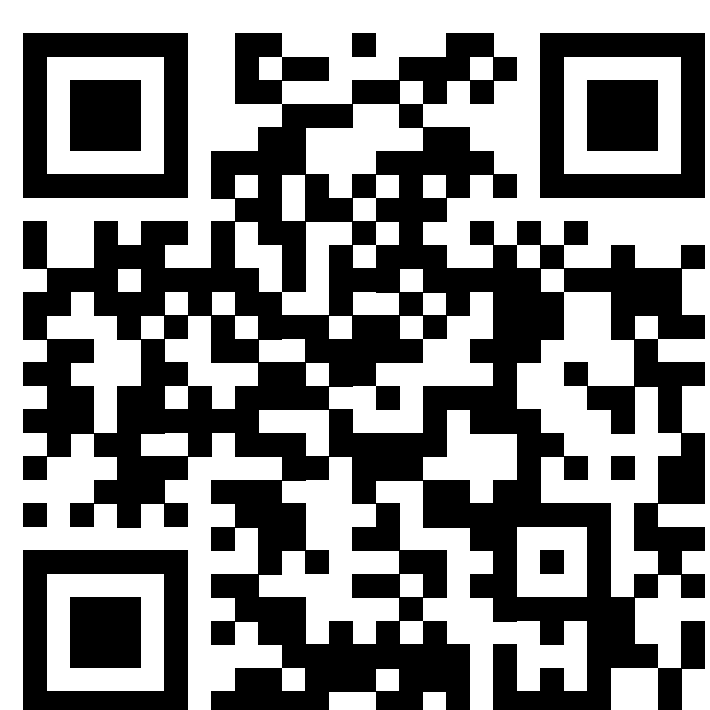

AVINOX SYSTEM

VELOMATE



Take advantage of the full range of services offered by your VELO DE VILLE REVO-C with the VELOMATE APP.:

Accident safety & detection
Driving statistics
Theft protection
Discounted insurance
Dealer search & service

You can install the VELOMATE APP on your smart-phone via the [App Store](#) and [Google Play](#):



VELOMATE
im APP Store



VELOMATE
bei Google Play

For further and detailed information,
please visit our official website:
www.velo-de-ville.com/en/Service/Digital-Services/



VELOMATE
INFO

VELO DE VILLE



QUICK START GUIDE



VELO DE VILLE
WEBSITE



VELO DE VILLE
IMAGEFILM



VELO DE VILLE
VALUES



VELO DE VILLE
Al Zweirad GmbH
Zur Steinkuhle 2
48341 Altenberge

Managing Directors:
Volker Thiemann
Alain Thiemann
Moritz Thiemann

Telephone:

+49 (0) 2505 93 05 0

Fax:

+49 (0) 2505 93 05 900

E-Mail:

info@velo-de-ville.com

www.velo-de-ville.com