



VARIO BAR

Set Art. no.: 189-99-02615

Installation instructions & information Page 1 / 2



INSTRUCTIONS




CONFIGURATOR

Edition: 18 August 2025
VELO DE VILLE
AT-Zweirad GmbH
Zur Steinkuhle 2
48341 Altenberge
Germany


These instructions describe the installation and use of the VELO DE VILLE Vario bar on the VELO DE VILLE LOADY

ALWAYS use threadlocker when fitting screws.


Preferably in the form of **LOCTITE 243**.

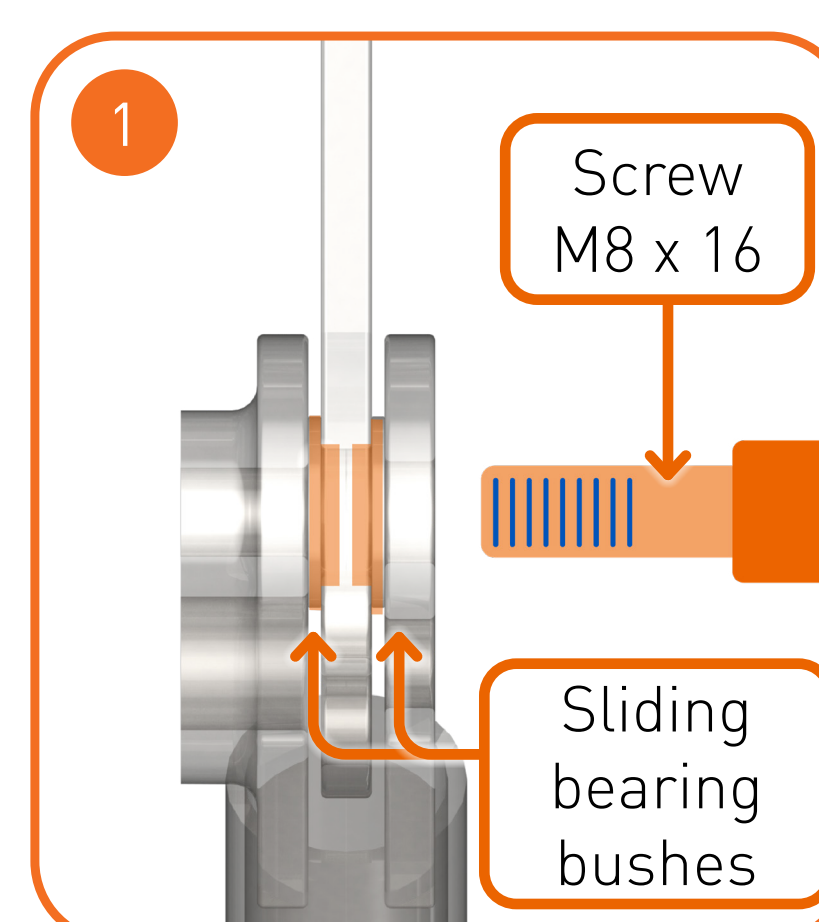


Position the sliding bearing bushes on both sides at the ends of the side bars as shown.

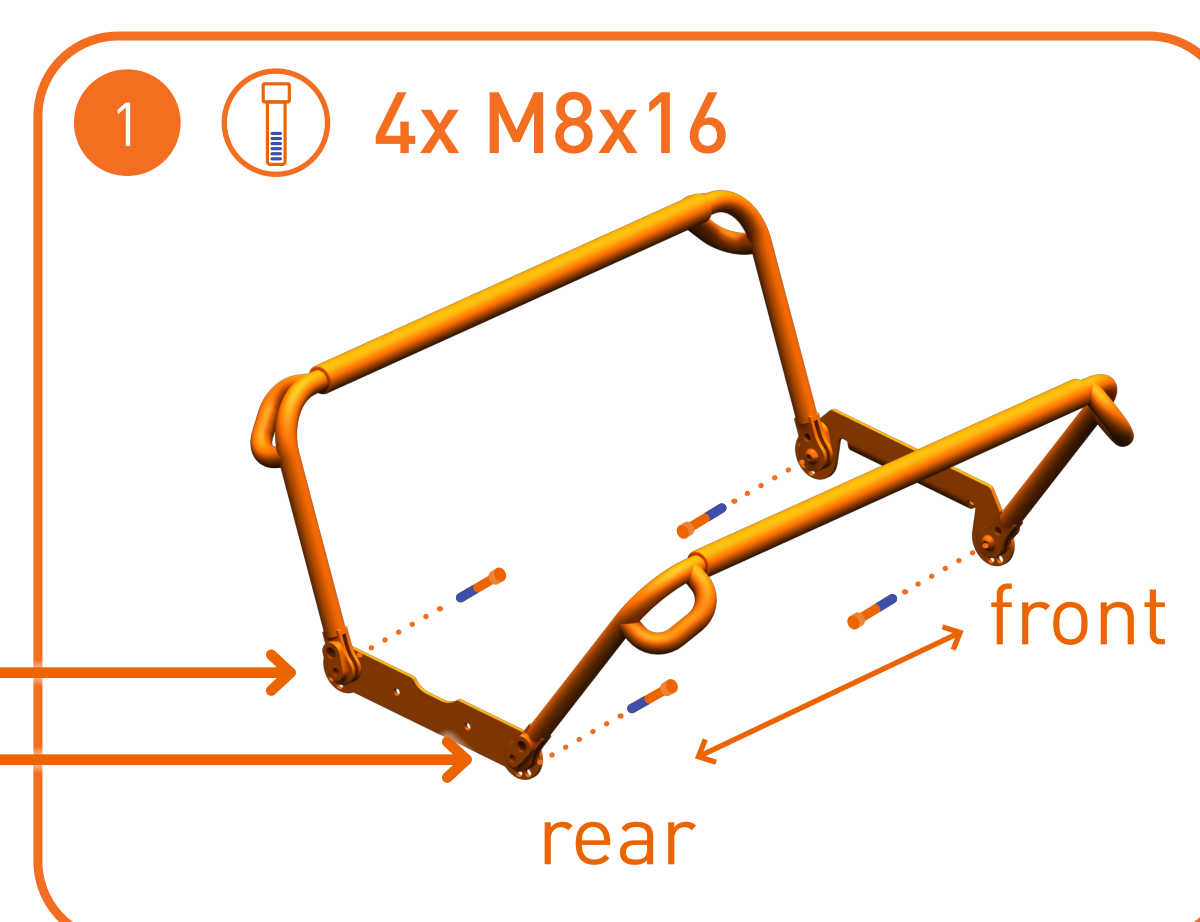


Attach the side bars to the mounting plates at the front and rear through the centre hole. Tighten the screws so that the bars can be easily moved.

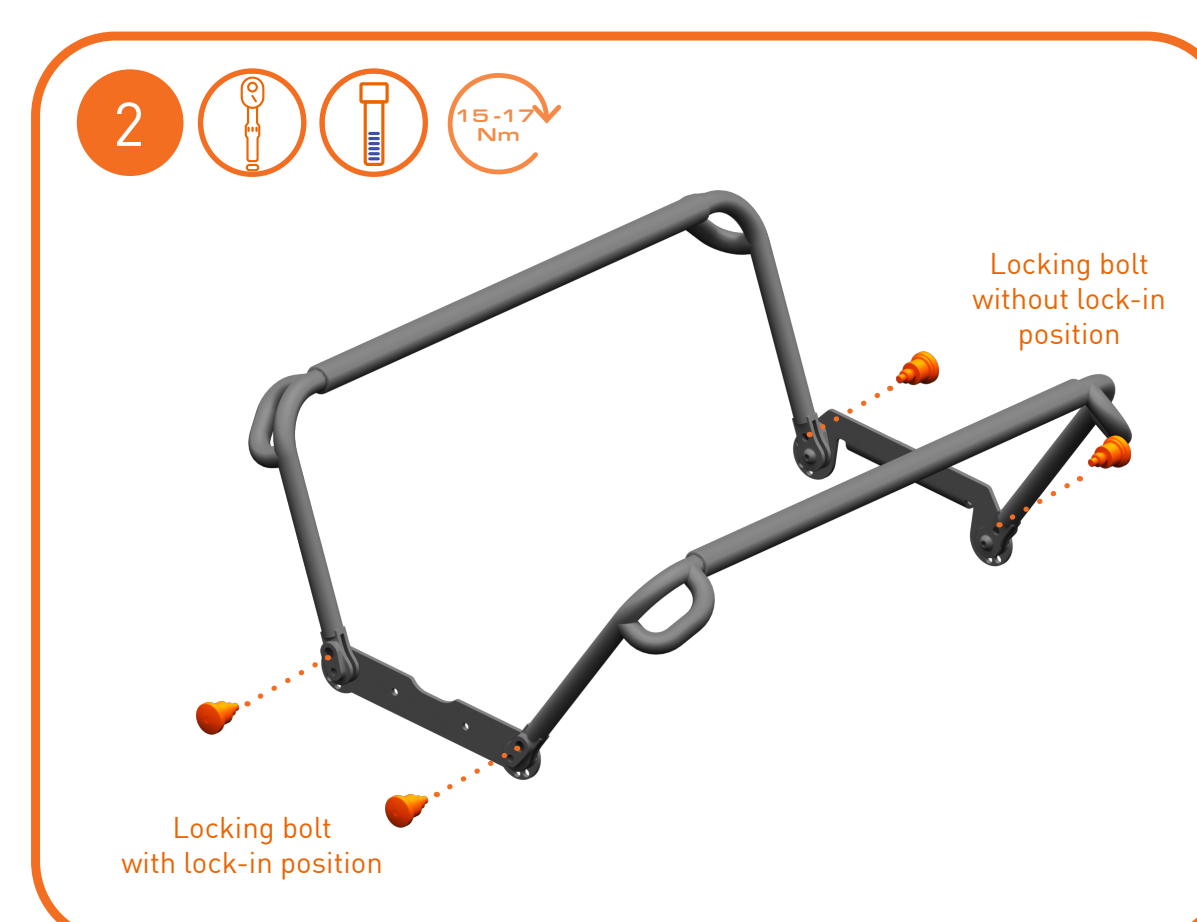


Attach the locking bolts with lock-in function at the rear, and locking bolts without lock-in function at the front.

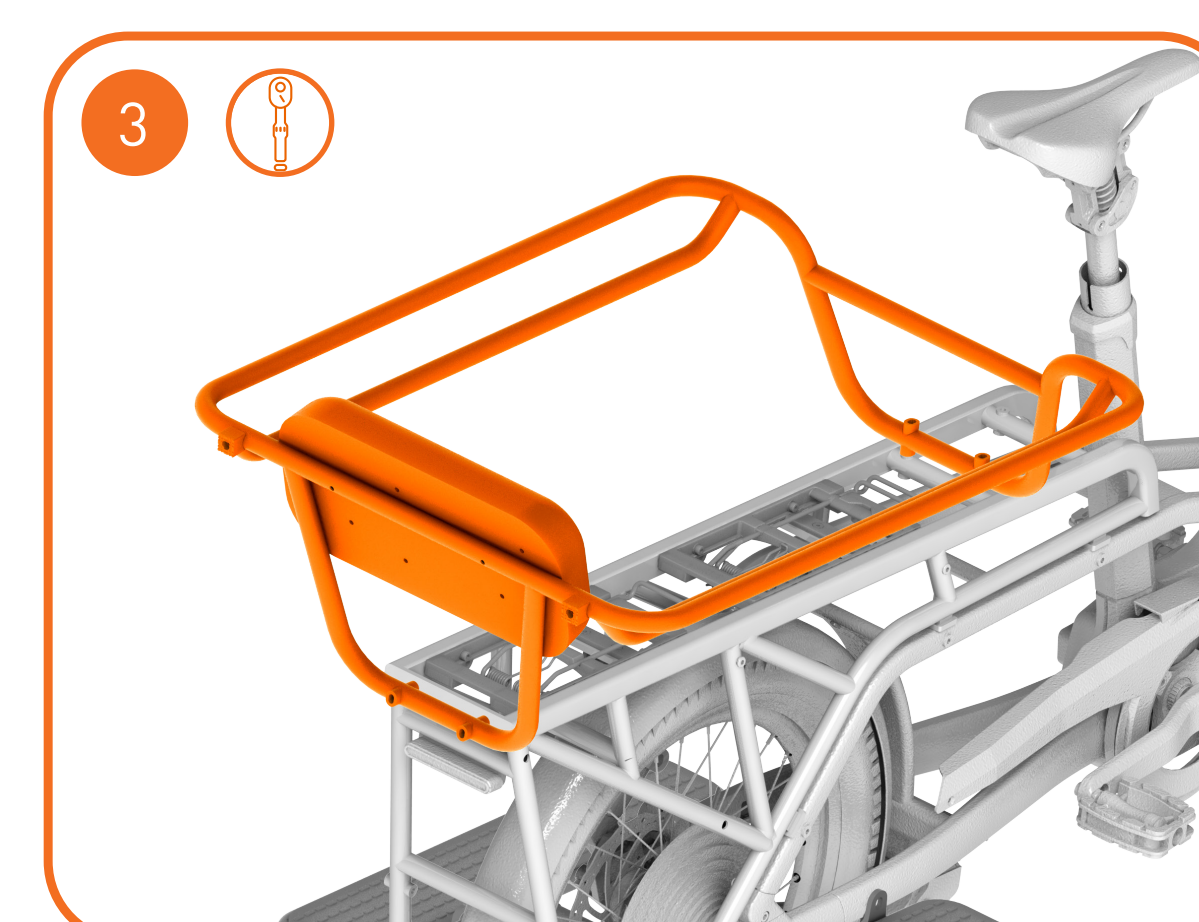

Remove the ride bar in accordance with the Original Operating Instructions Part 1, if it was previously fitted.

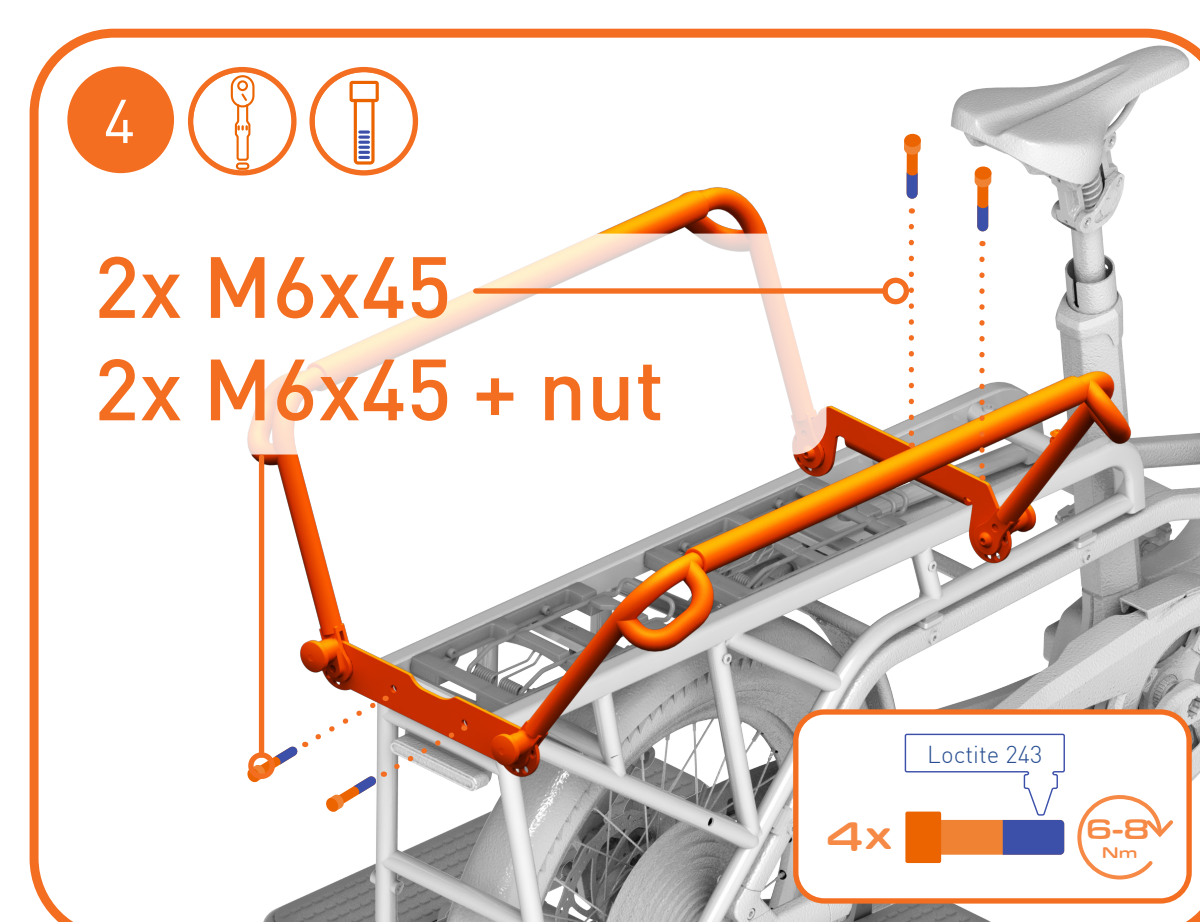


Position and fasten the Vario bar in place.

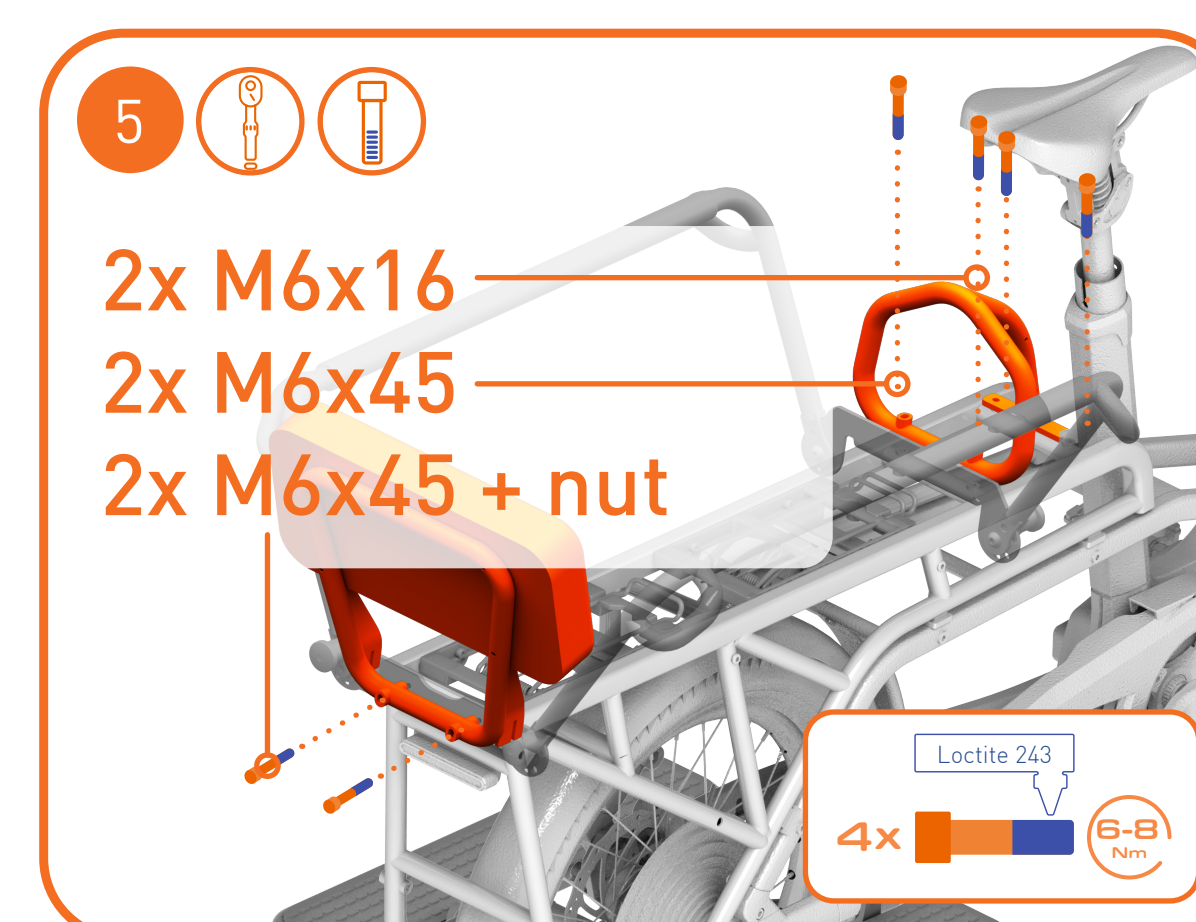


Attach the back rest and rodeo bar if passengers are to be carried! **These components need to be ordered separately!**

! Safety & requirements


Please pay attention to the safety instructions and requirements for carrying passengers and loads on the VELO DE VILLE LOADY. This information can be found in the **Original Operating Instructions Part 1!**

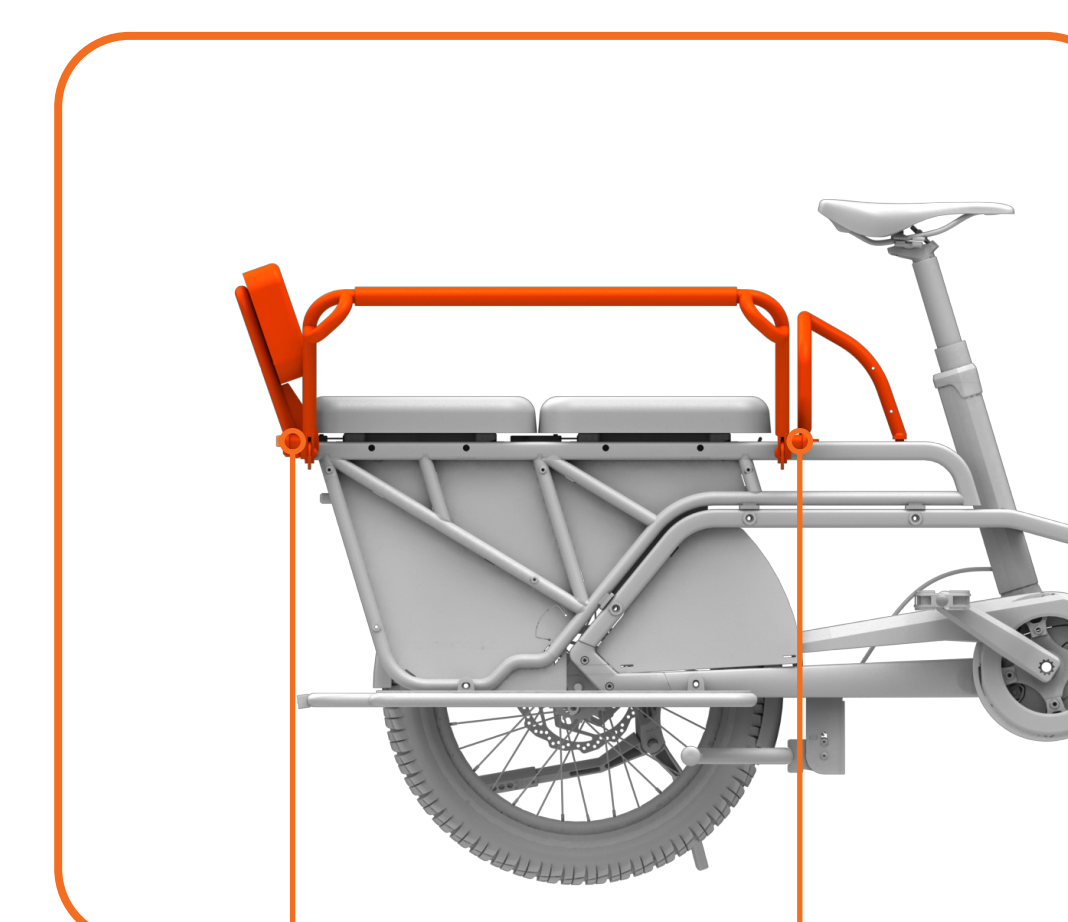


Locking bolt rear with lock-in position

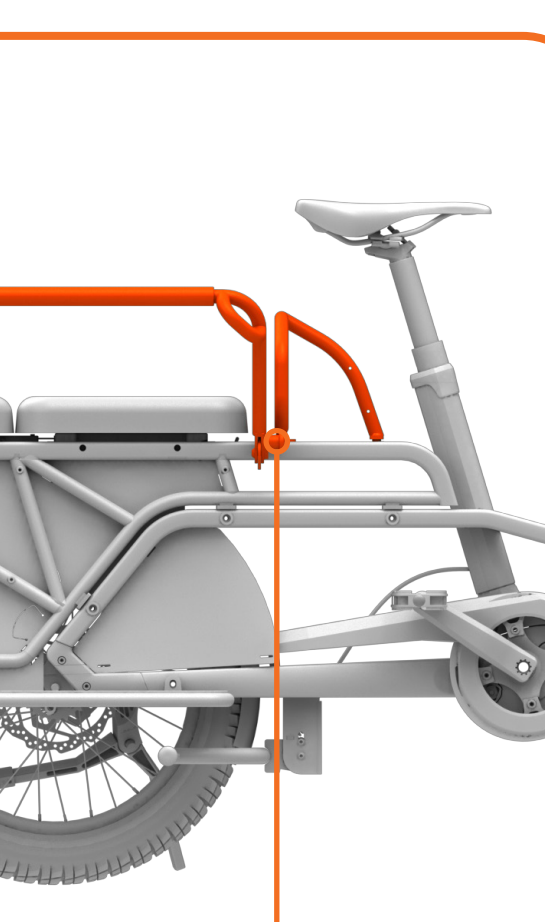


Locking bolt front without lock-in position

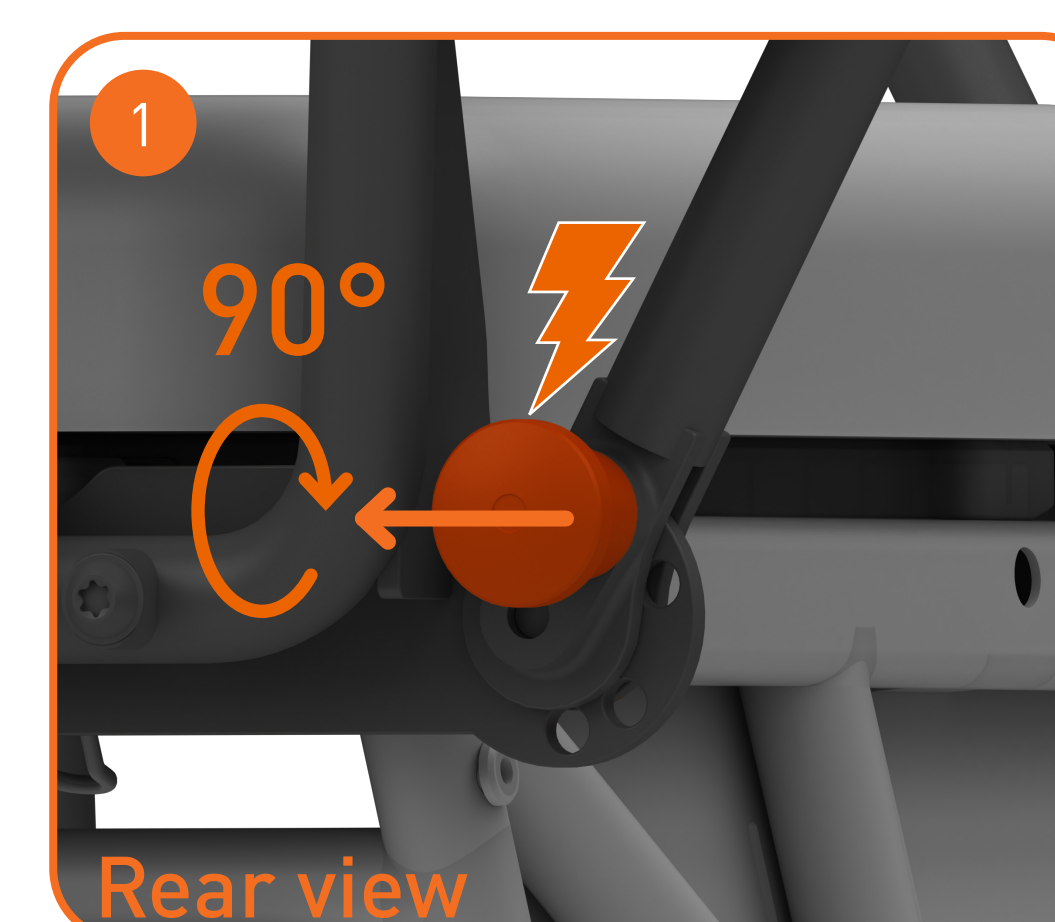

Tighten the rear locking bolts and turn them 90° to unlock the locking bolt.

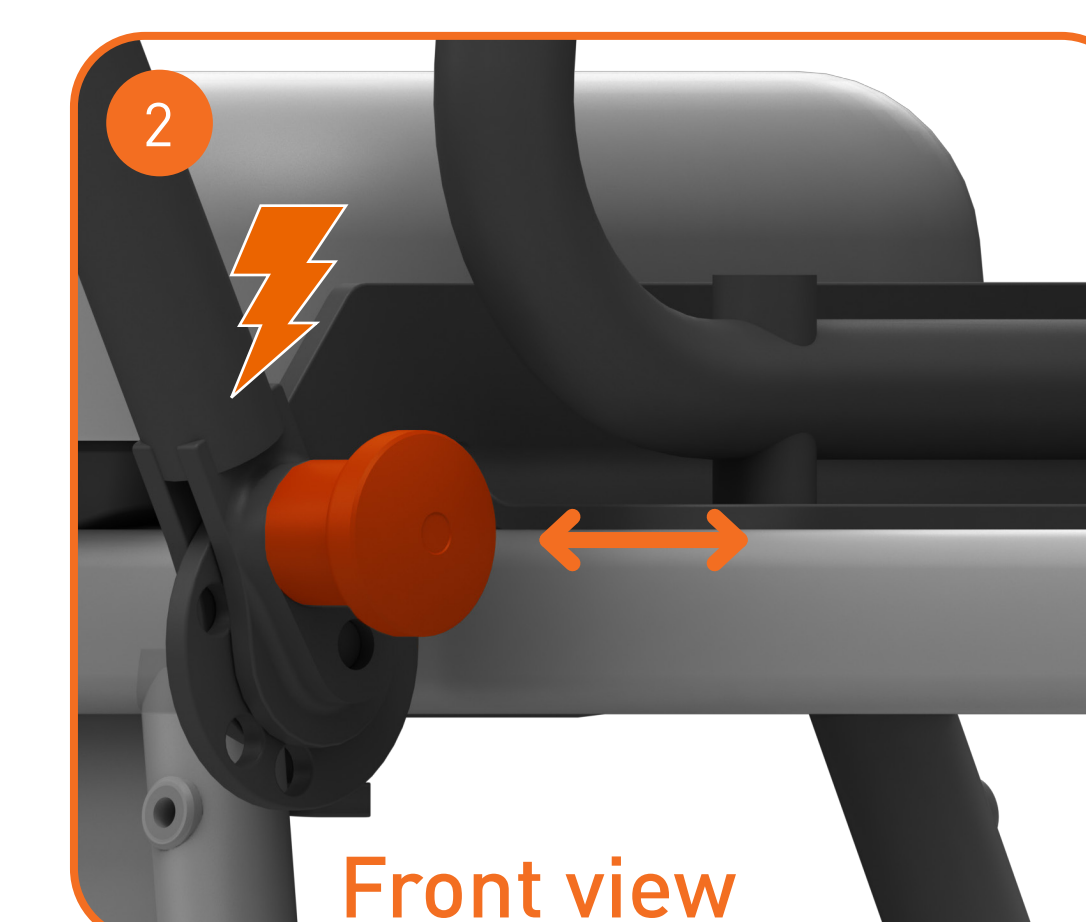


Now you can pull the locking bolt forward. It has no lock-in position. Now swivel the bars into your preferred position (see below) and snap the locking bolt into the required position. **Make sure there are no hands and fingers in the hinge area! Risk of entrapment!**

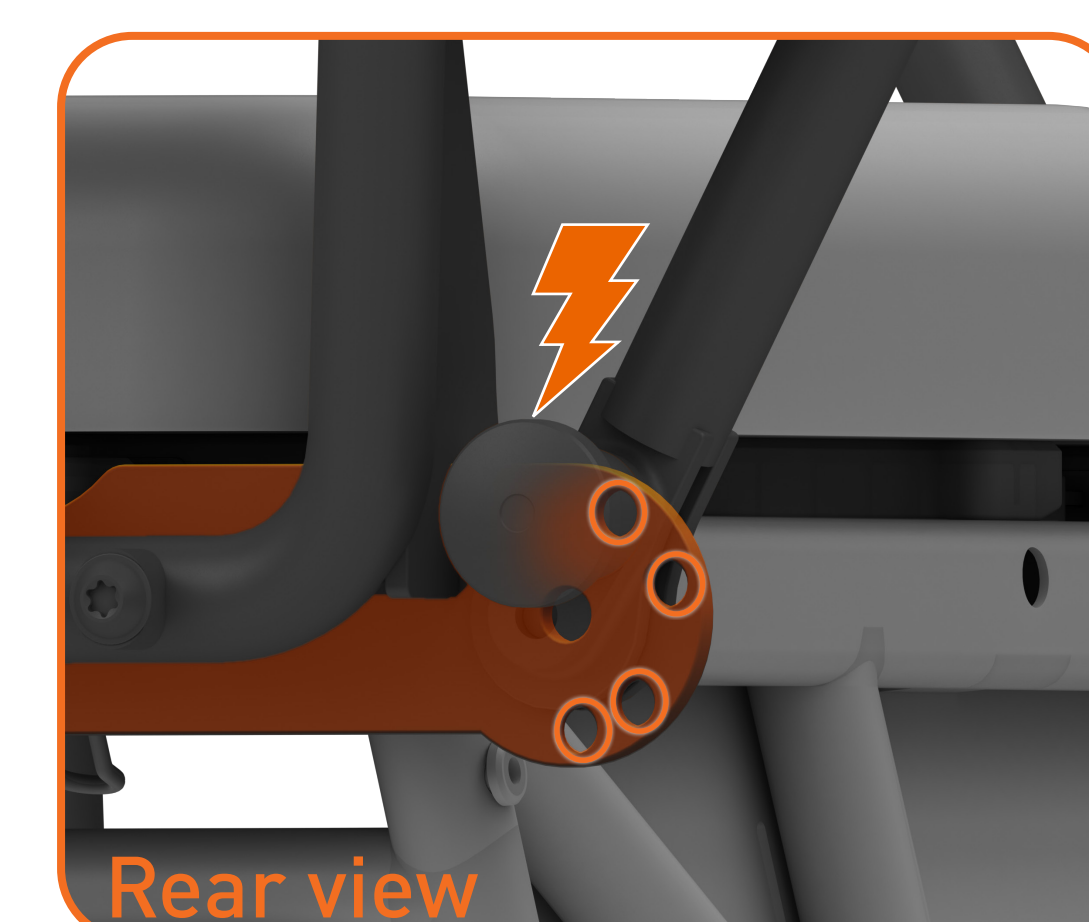


Rear view


! Once the position of the side bars has been determined, make sure that the rear locking bolt is locked in place again. To do this, turn the head of the locking bolt back 90° in the opposite direction. It will now snap into place. **Make sure that ALL locking bolts are firmly secured in the locking points!**

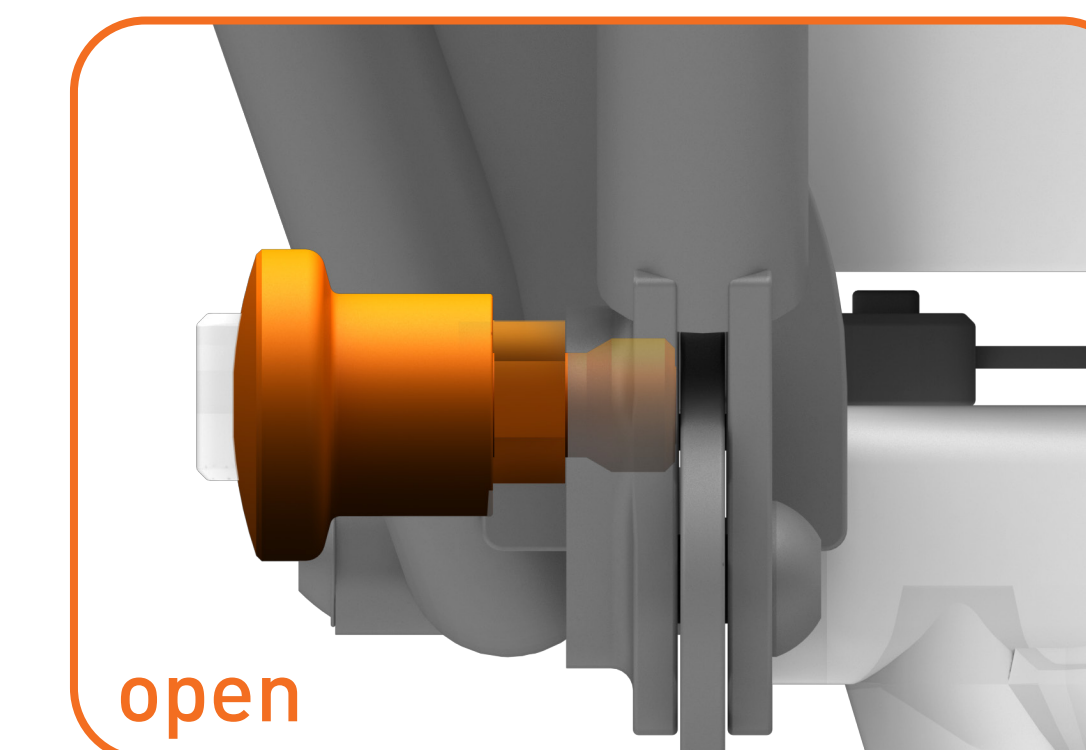


open

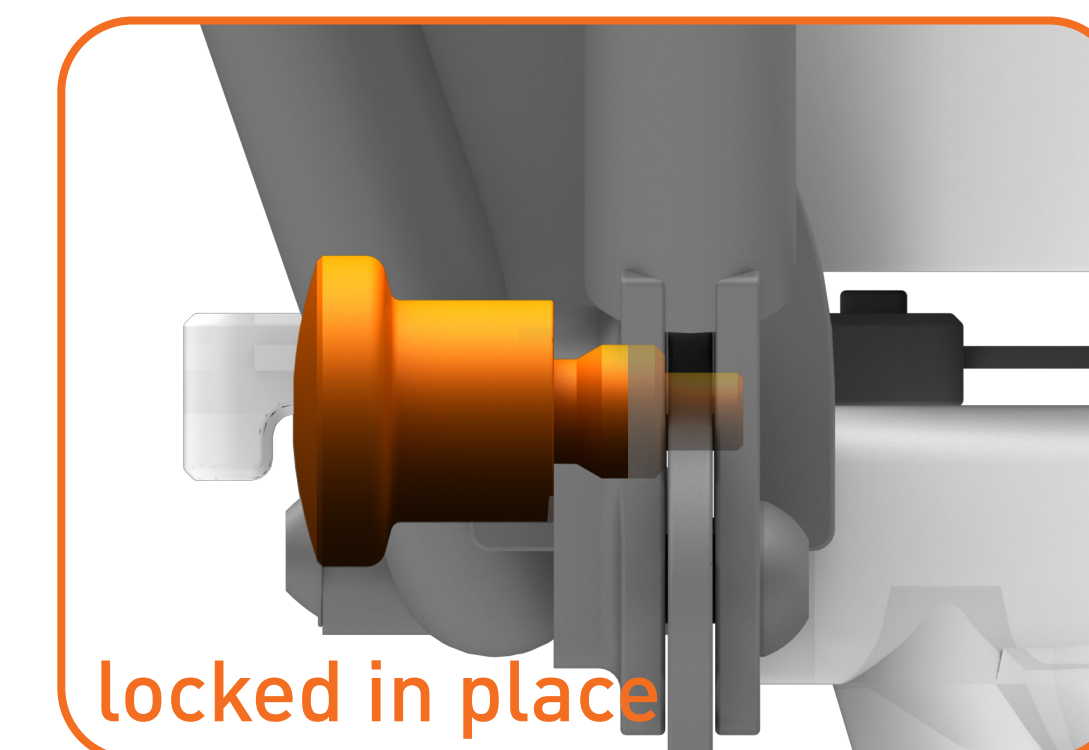


locked in place

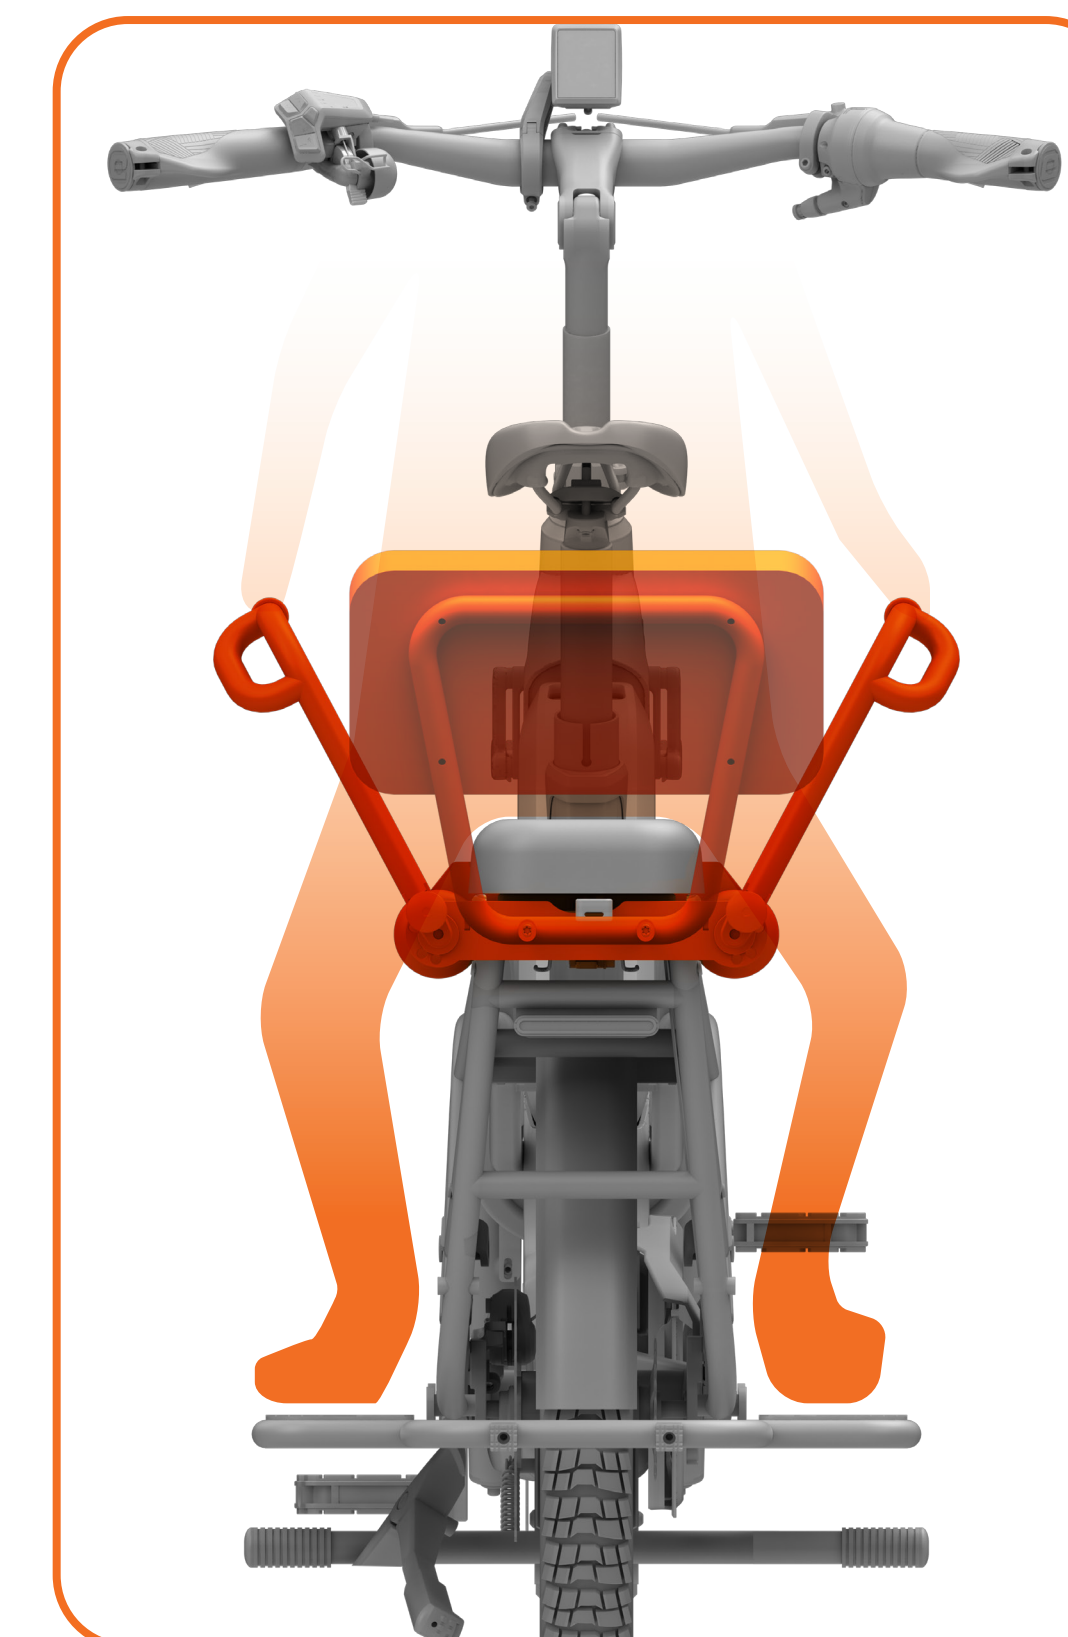


Guards-Up!
Protective position when carrying passengers.

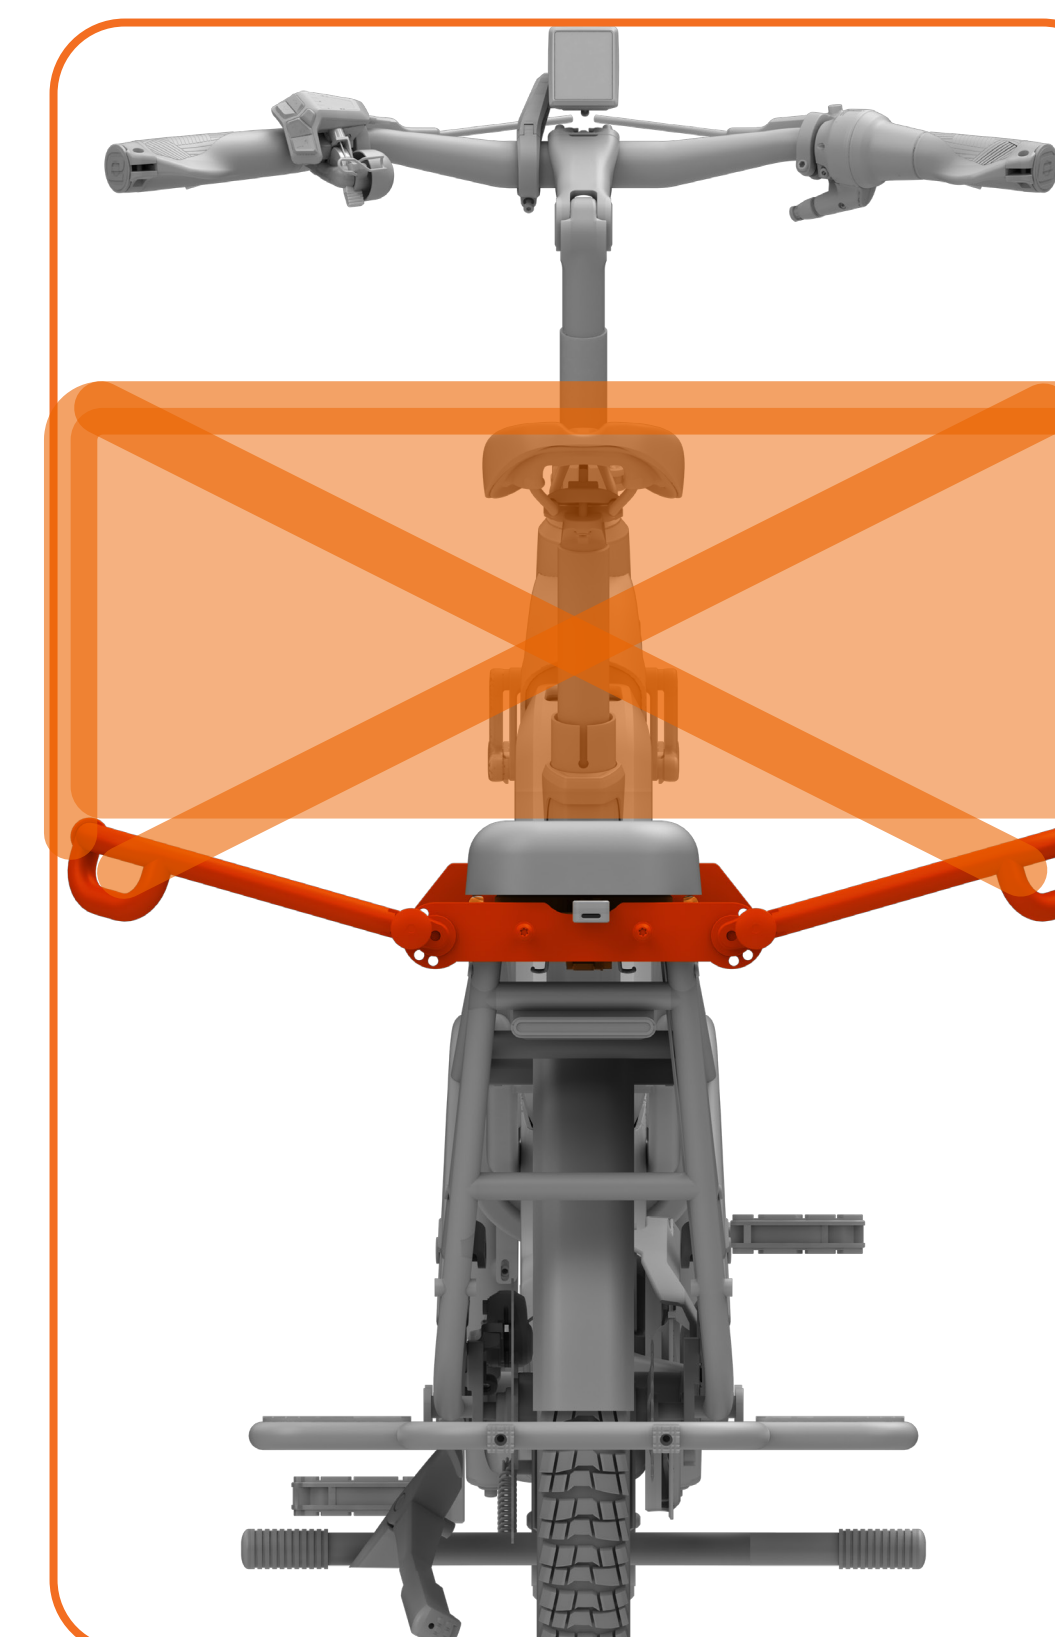

Plane-It!
The side bars form a flat base with the seat pads 60 cm long x 80 cm wide.

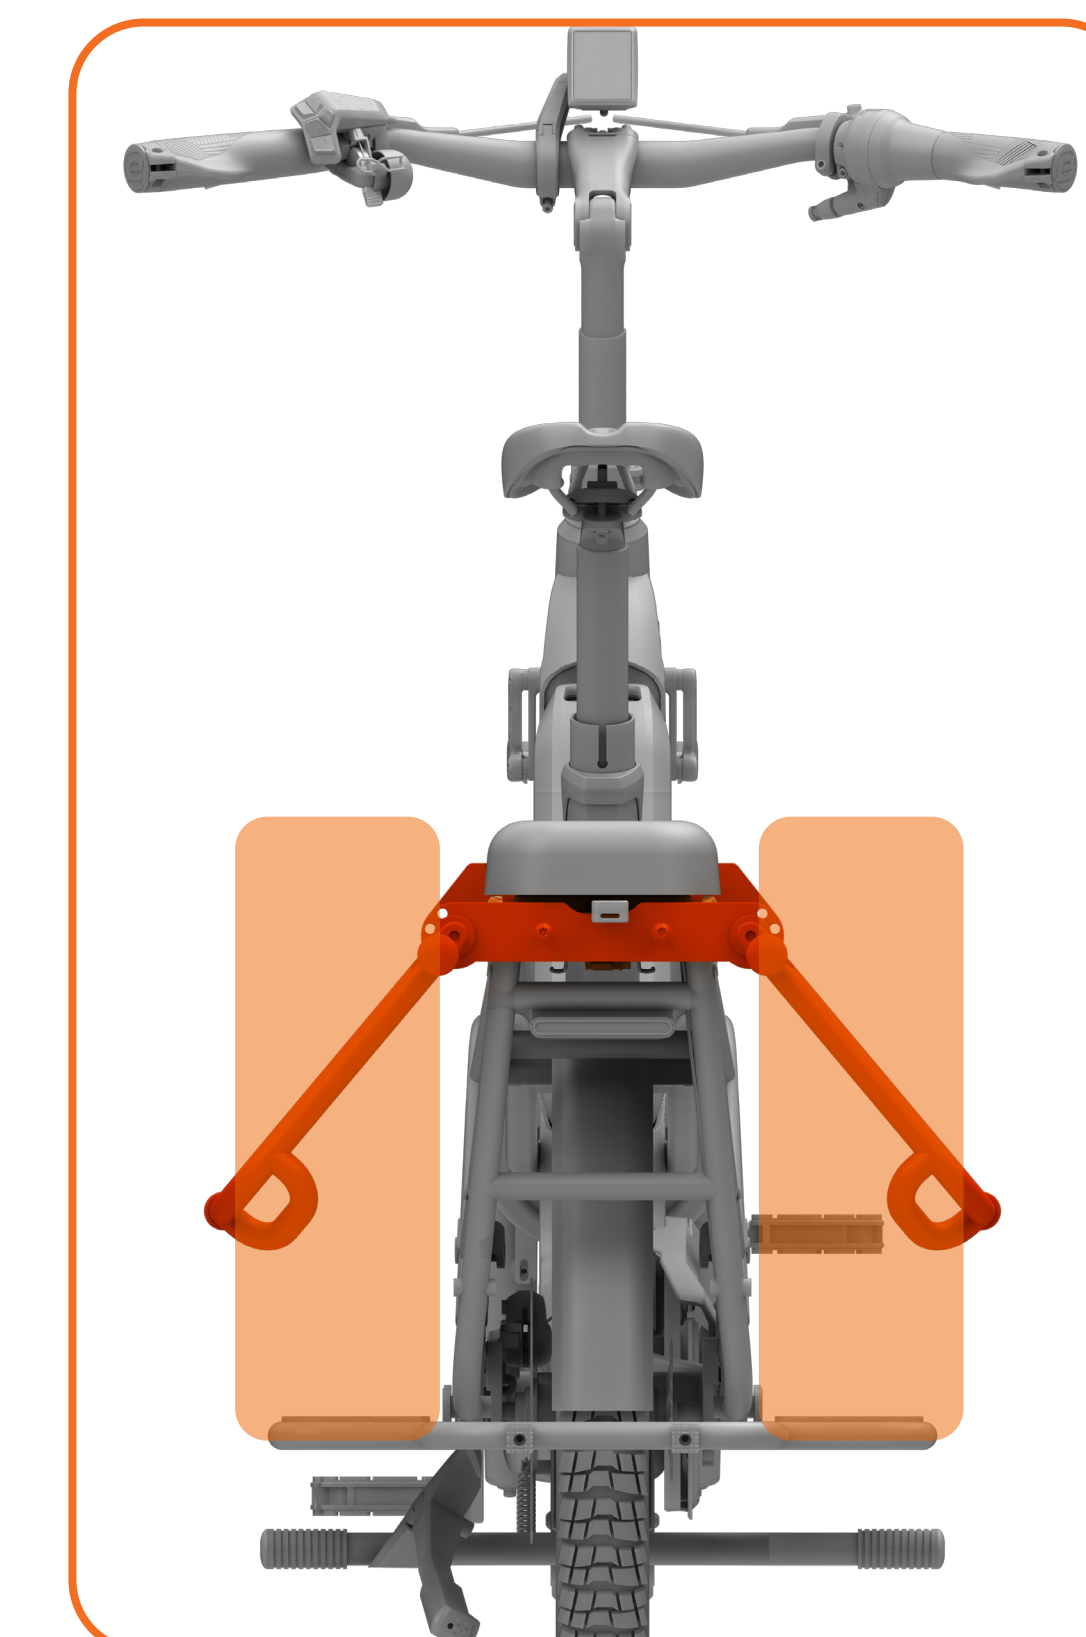

Guards-Down!
The side bars form a guard frame around the feet or to restrict panniers.

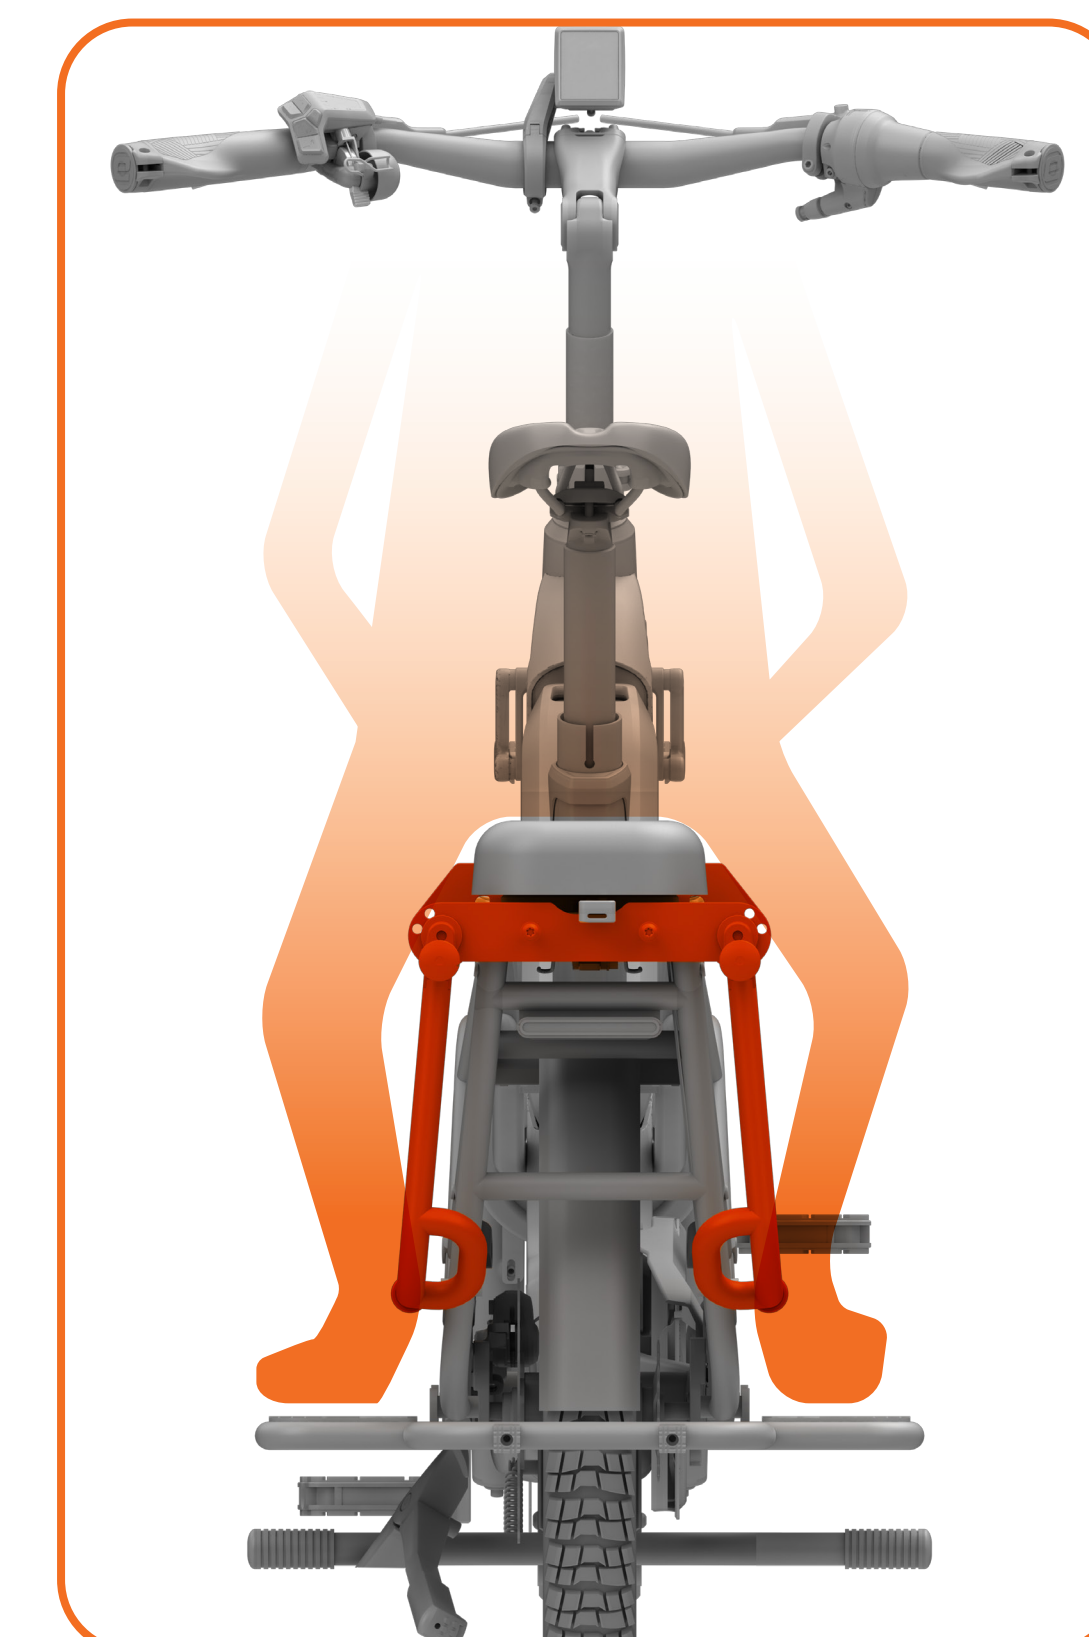


Free-Ride!
The side bars are fully folded down. They have no protective or restrictive function.



VARIO BAR


Safety information!

Page 2 / 2

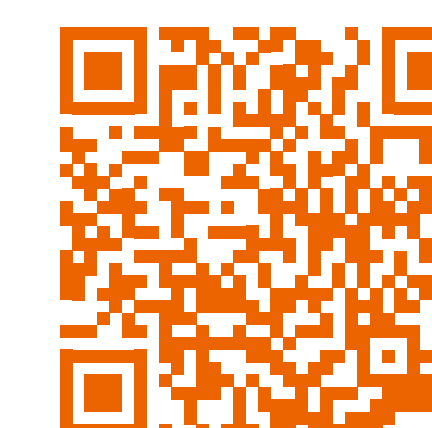

For more information on carrying passengers, please refer to the VELO DE VILLE LOADY Supplementary Instructions.

Edition: 18 August 2025
VELO DE VILLE
AT-Zweirad GmbH
Zur Steinkuhle 2
48341 Altenberge
Germany


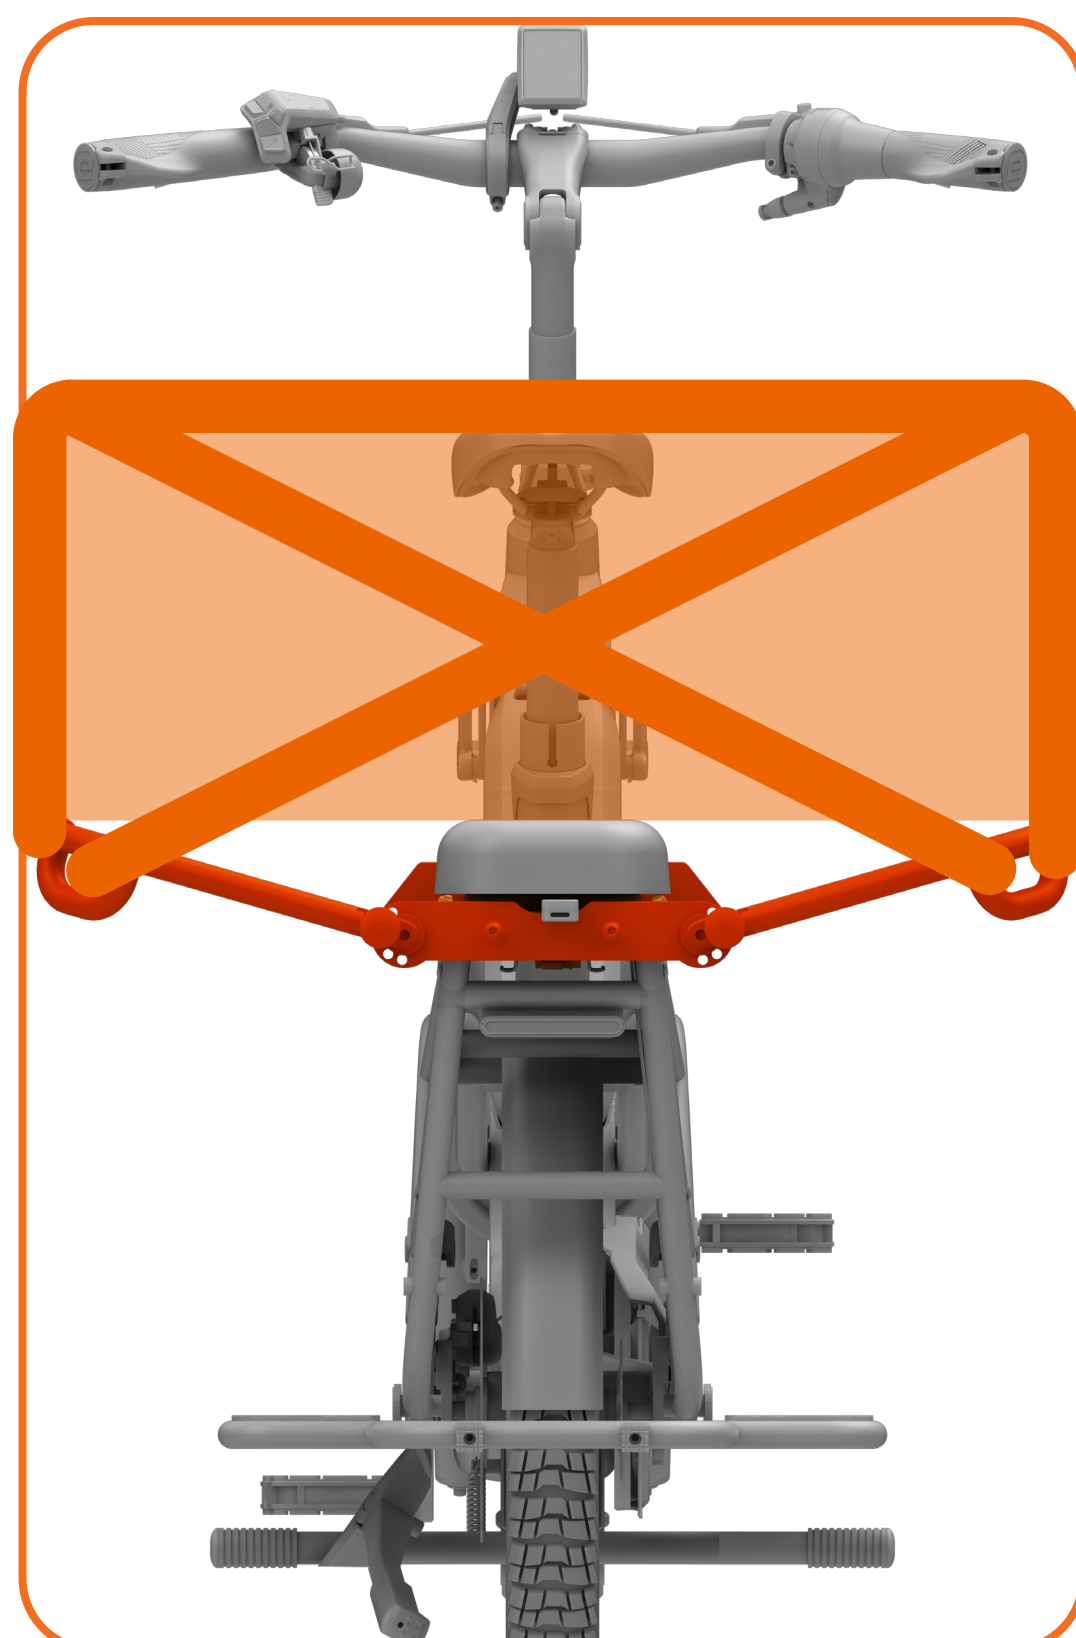


Securing the load

Always make sure that your cargo is adequately secured and fixed in place using bungee cords or lashing straps!


Vertical parking is prohibited

Parking your VELO DE VILLE LOADY vertically with a Vario bar fitted is PROHIBITED! There is a risk of it toppling over and injuring someone!

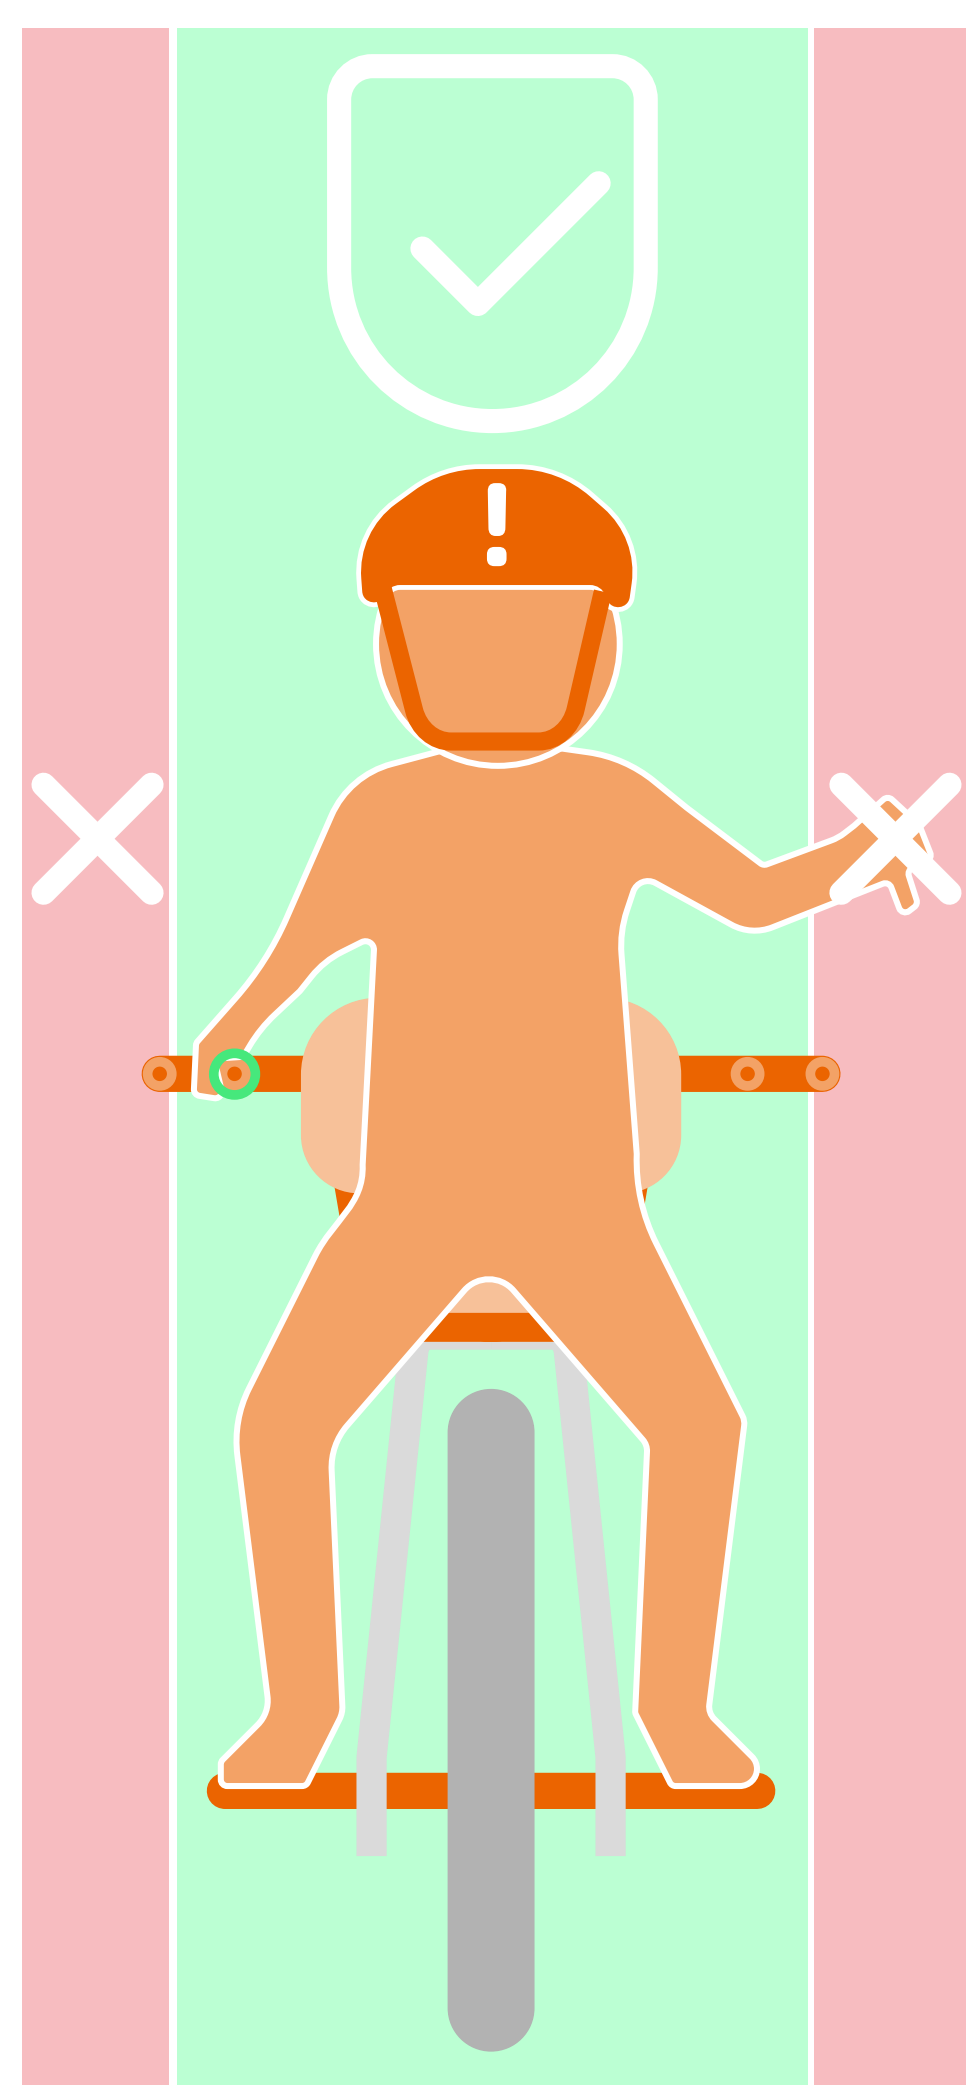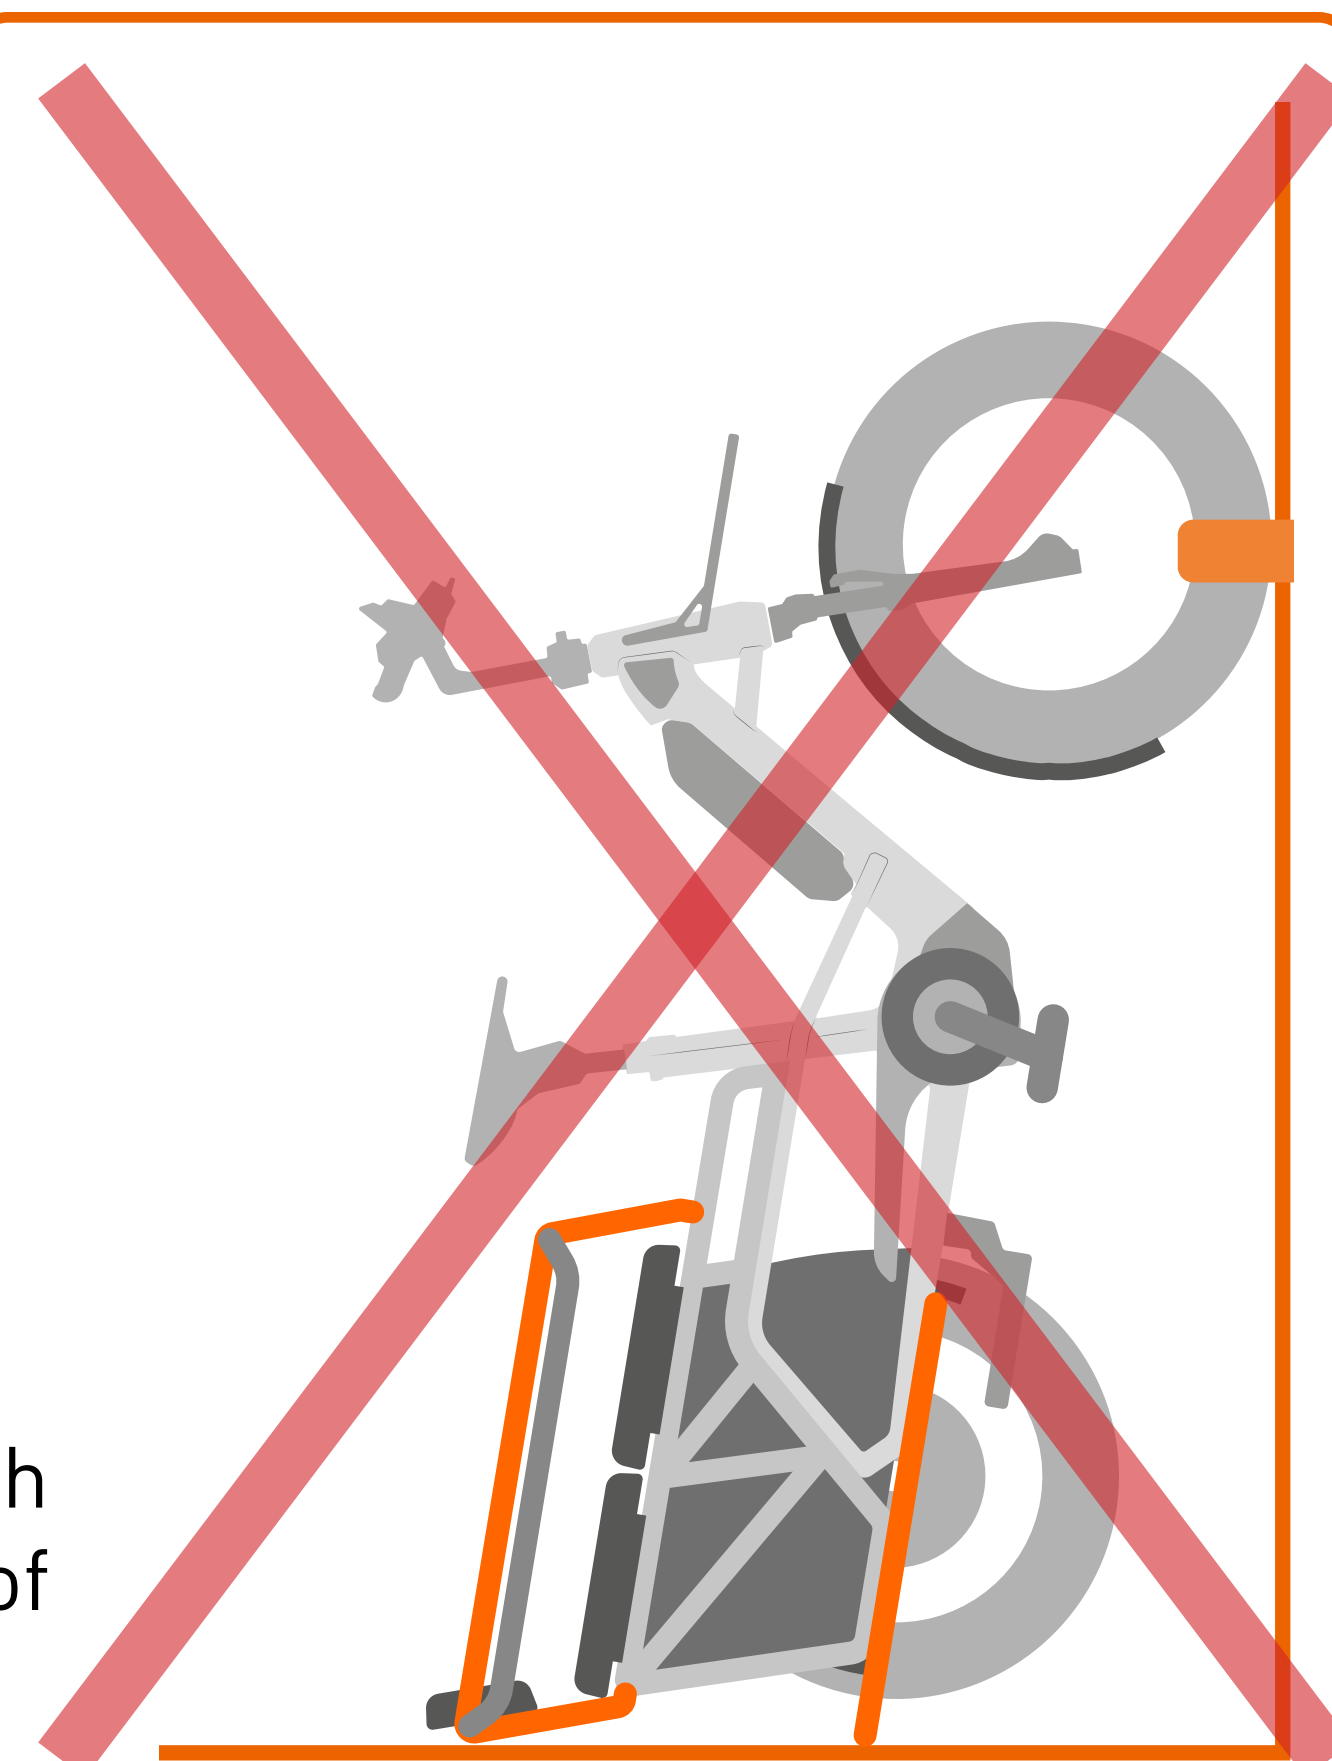

Holding area & risk of entrapment


Passengers are only allowed to hold the inner struts of the Vario bar. The outer struts act as a protective frame in the event of a collision.

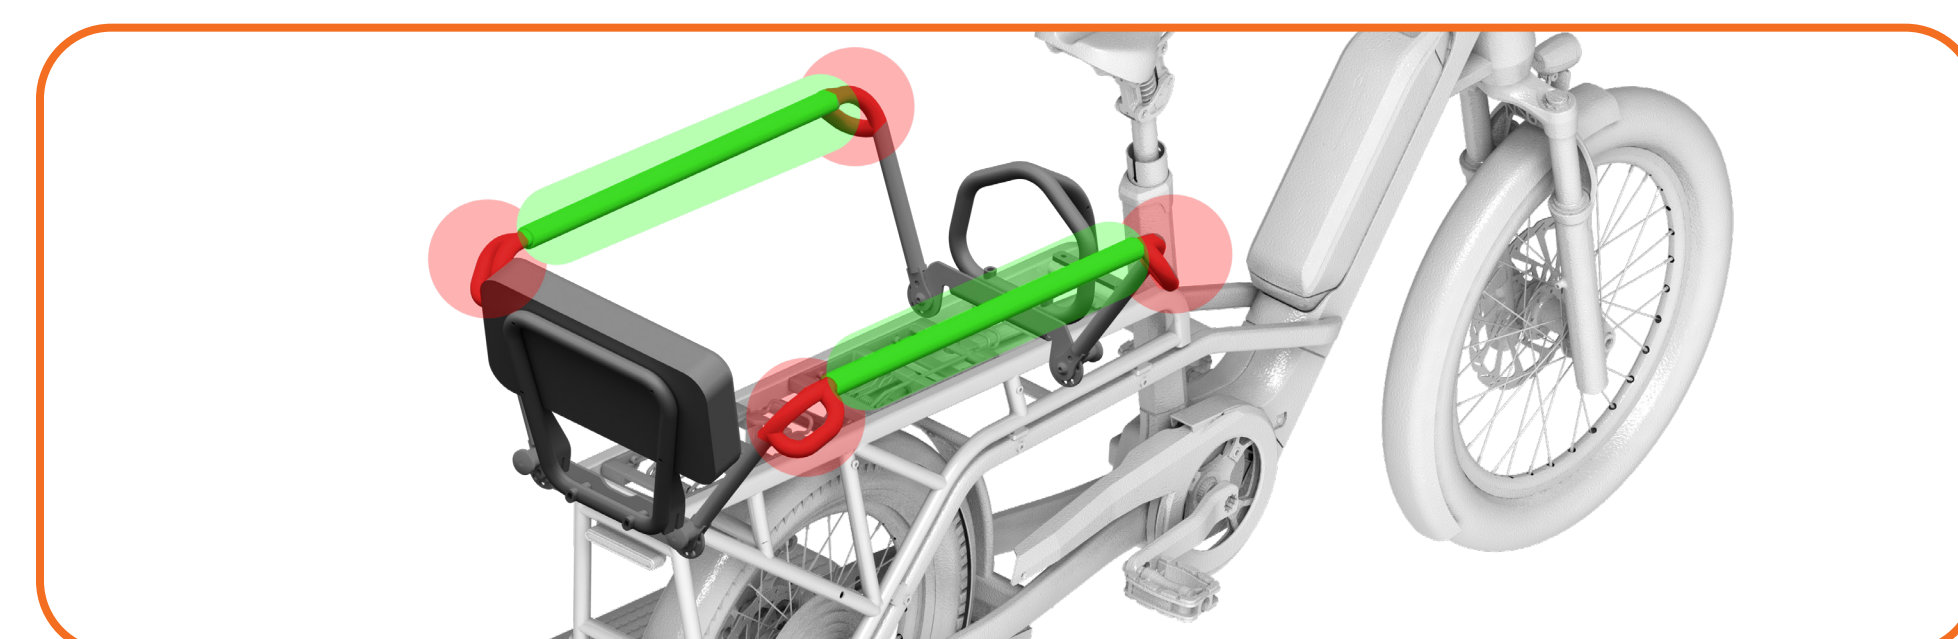

Passengers are not allowed to look over the Vario bar or reach their limbs outside the Vario bar while riding to guarantee a stable riding position.

Movements outside the Vario bar increase the risk of falling and injury!

Weight distribution and maximum permissible total weight

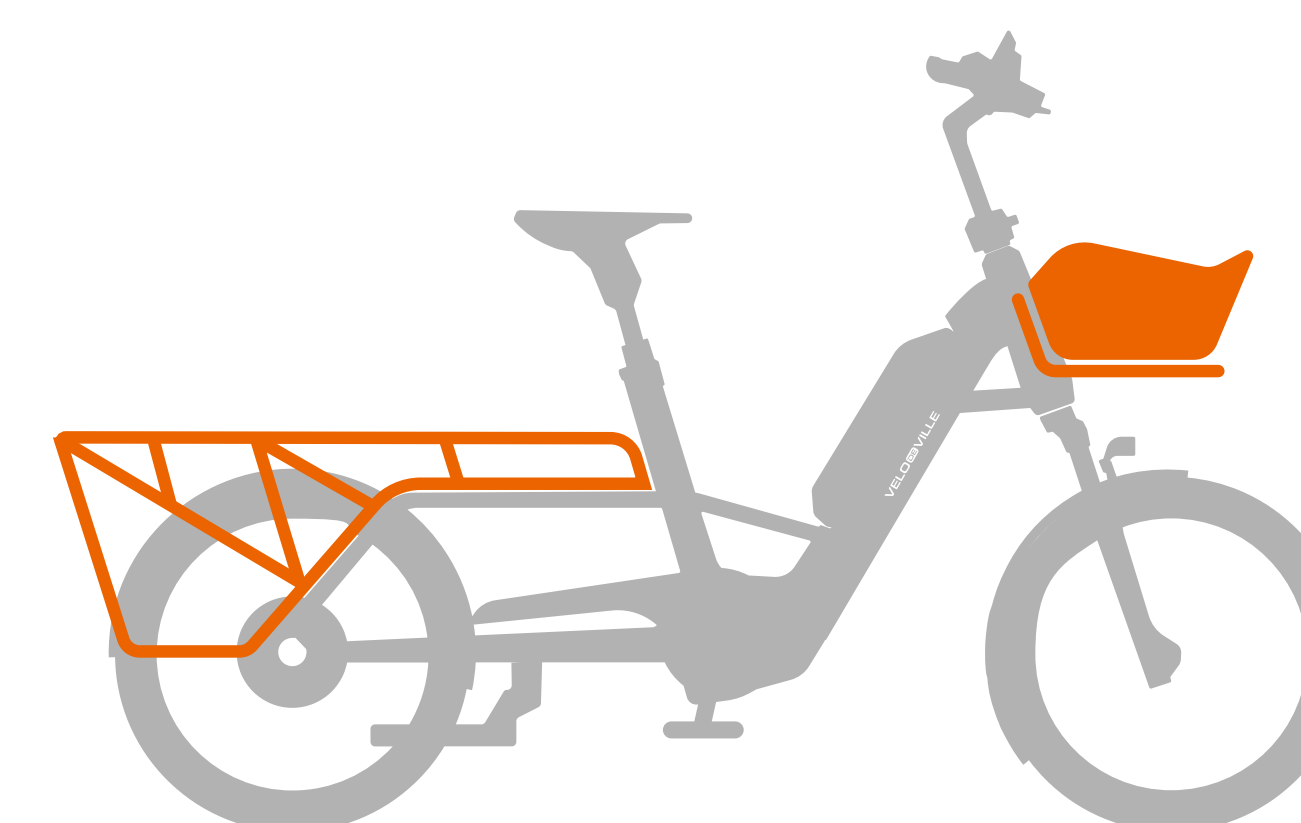

Weight of the VELO DE VILLE LOADY	32 kg
+ Rider's weight	XX kg
+ Load / passengers including accessories on the rear luggage carrier	Max. 75 kg
+ Load including accessories in the front basket / on the front luggage carrier	Max. 10 kg
+ Total weight of trailer, including load / passengers ¹	Max. 45 kg


Max. permissible total weight **WITHOUT** Enviolo HD gears

180 kg

Max. permissible total weight **WITH** Enviolo HD gears

200 kg

Example of weight calculation

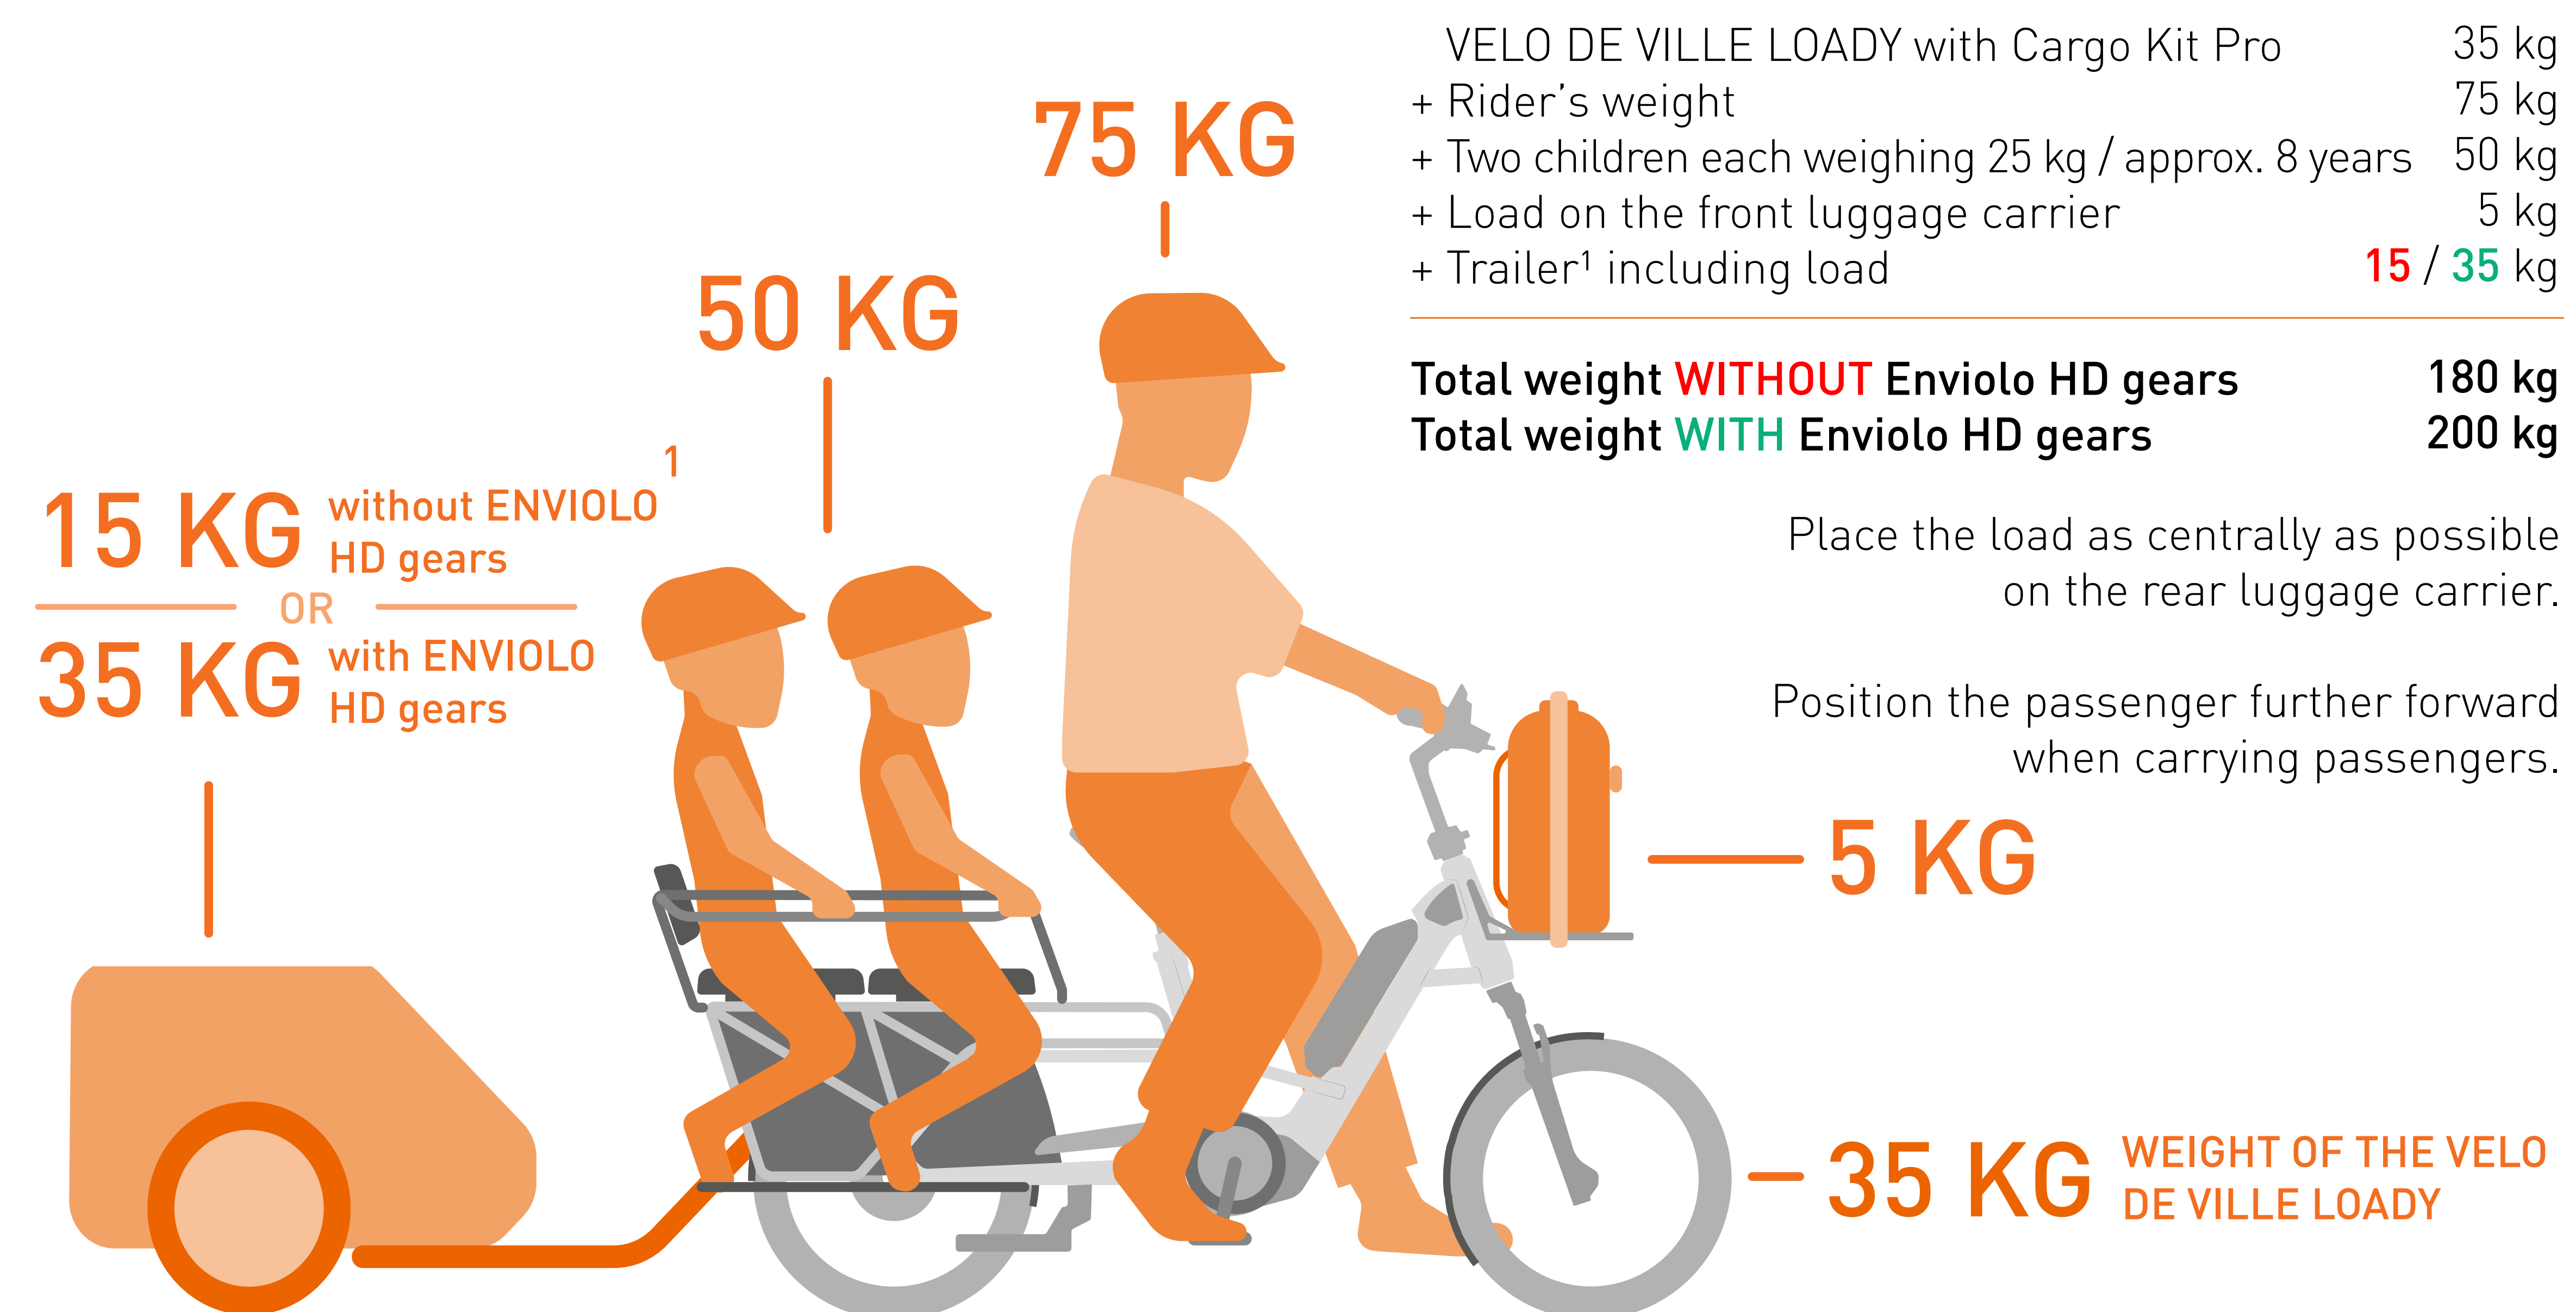

¹ Consult the operating instructions for your trailer for the maximum permissible total weight of the trailer specified by the manufacturer!