

These instructions show how to install and use the **Space Bar on the VELO DE** VILLE LOADY

The Space Bar can only be used in combination with the Ride Bar!



Position the pre-assembled space bar on the ride bar. Make sure that the clamps are positioned between the outer and inner struts.

100

Now divide the loading area according to your needs.



Shake the space bar to check whether it is firmly fixed. If not, tighten the knobs as described in step 3!

Now you can position your freight and secure it to the tubes of the Ride Bar and Space Bar using additional fastening equipment such as tensioning straps and lashing straps.

Assembly instructions & notes



1x Space Bar Art. Nr.: 179-50-00020





Secure the space bar by turning the two knobs clockwise. Make sure that the clamps press down evenly.

Safety & security Requirements

Please observe the safety instructions and requirements for transporting people and loads on the VELO DE VILLE LOADY. These can be found in the Original operating instructions part 1!

NOTES ON WEIGHT DISTRIBUTION



Weight VELO DE VILLE LOAD + Weight driver

- + Cargo / passengers incl. acc
- + Load incl. accessories on fro
- + Total weight of trailer incl. le

max. permissible total weigh max. permissible total weigh





¹Please refer to the operating instructions for your trailer for information on the maximum permissible total weight of the trailer specified by the manufacturer!





ht <mark>WITHOUT</mark> Enviolo HD ht WITH Enviolo HD	180 KG 200 KG
ADY ccessories on rear luggage rack ront basket / front luggage rack load / passengers ¹	32 KG max. 110 KG max. 75 KG max. 10 KG max. 45 KG

+ Trailer ¹ incl. load	15 / 35 KG
+ Load on front carrier	5 KG
+ Two children á 25 KG / approx. 8 years	50 KG
+ Weight driver	75 KG
VELO DE VILLE LOADY with Cargo Kit Pro	35 KG

180	KG
200	KG

Position the load as centrally as possible on the rear luggage carrier.

When transporting passengers, they should be seated further forward.