



KICKSTAND ADAPTER

Set Art. no.: 189-99-50010

Installation instructions & information



INSTRUCTIONS



CONFIGURATOR


Edition: 23 July 2025
VELO DE VILLE
AT-Zweirad GmbH
Zur Steinkuhle 2
48341 Altenberge
Germany

These instructions describe the installation and use of the VELO DE VILLE kickstand adapter on the VELO DE VILLE LOADY.


ALWAYS use threadlocker when fitting screws. Preferably in the form of LOCTITE 243.

DO NOT USE THREADLOCKER ON THRU-AXLES!

Contents:

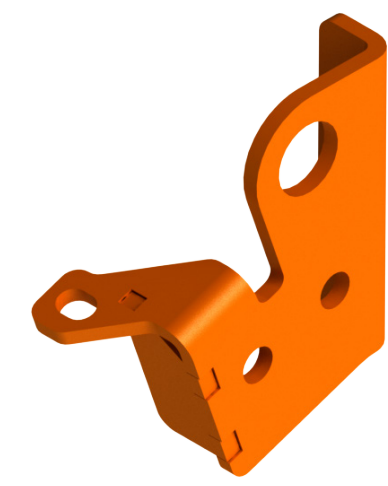

1x kickstand adapter

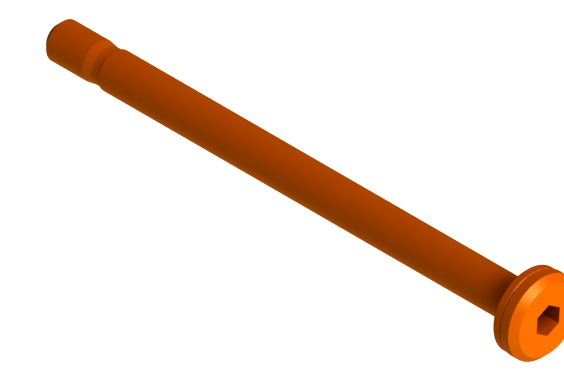


1x thru-axle
M12 x P1.5
L: 172 mm

SHIMANO brake caliper bolt
1x M5x45

DIN 912 cylinder head screw
2x M6x25 A2

Self-locking nut
DIN 985
2x M6 A2


Washer
DIN 125
2x 6.4 x 12 x 1.6 A2

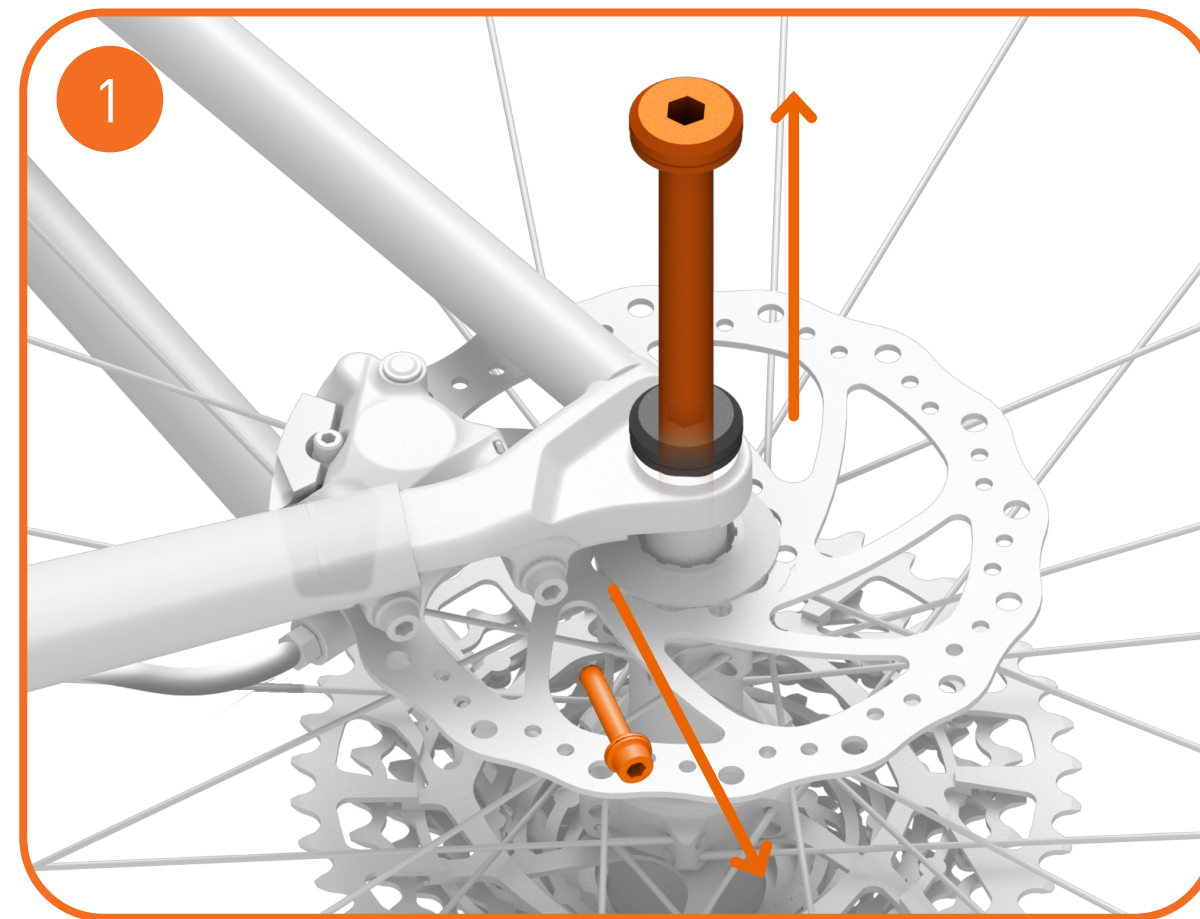

1
Loosen the rear thru-axle and the rear screw of the brake caliper.
Retain the screw and thru-axle!




2
Position the adapter plate as shown in the illustration.

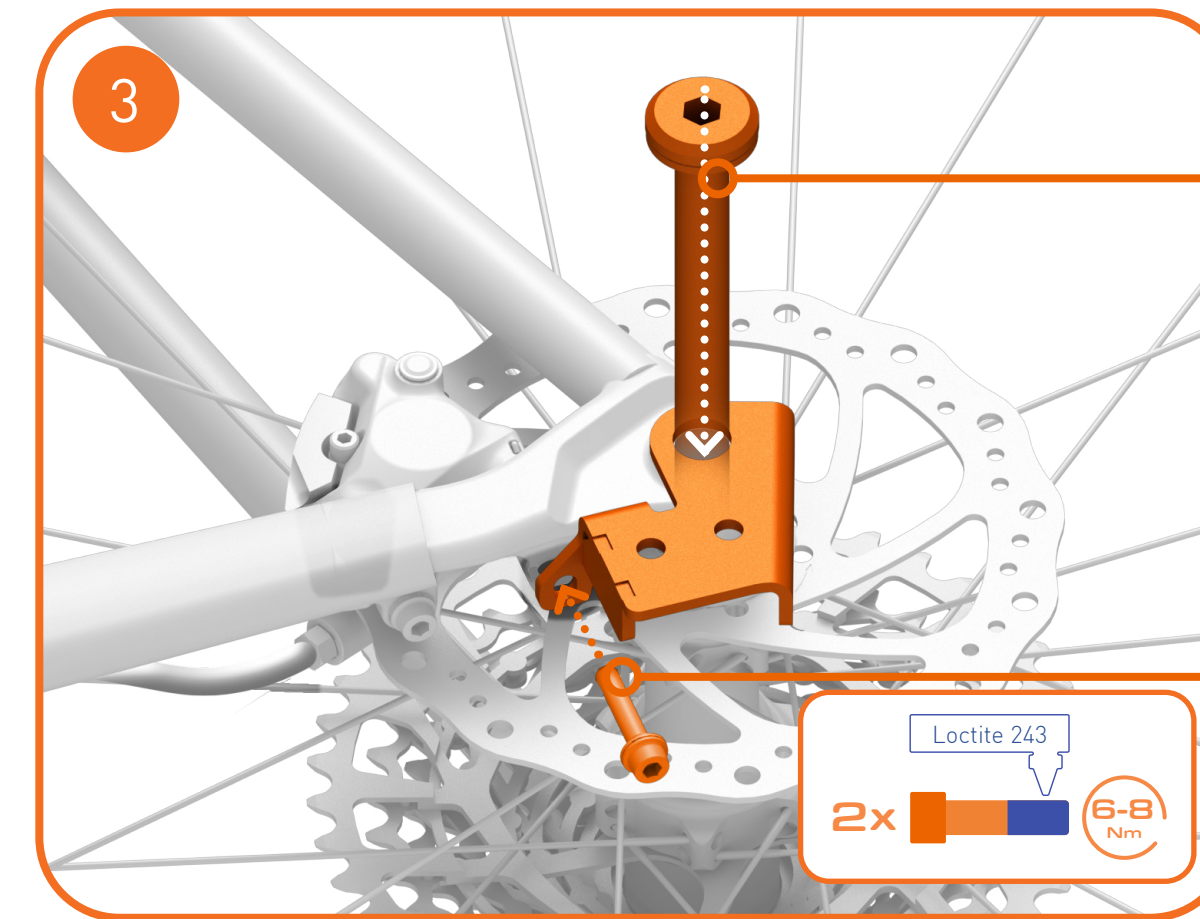



3
First fit the thru-axle supplied. The torque is printed on the screw.
Then attach the SHIMANO brake caliper bolt supplied at the rear to a torque of 6-8 Nm.

Thru-axle supplied

SHIMANO
brake caliper bolt
M5 x 45 / 6-8 Nm

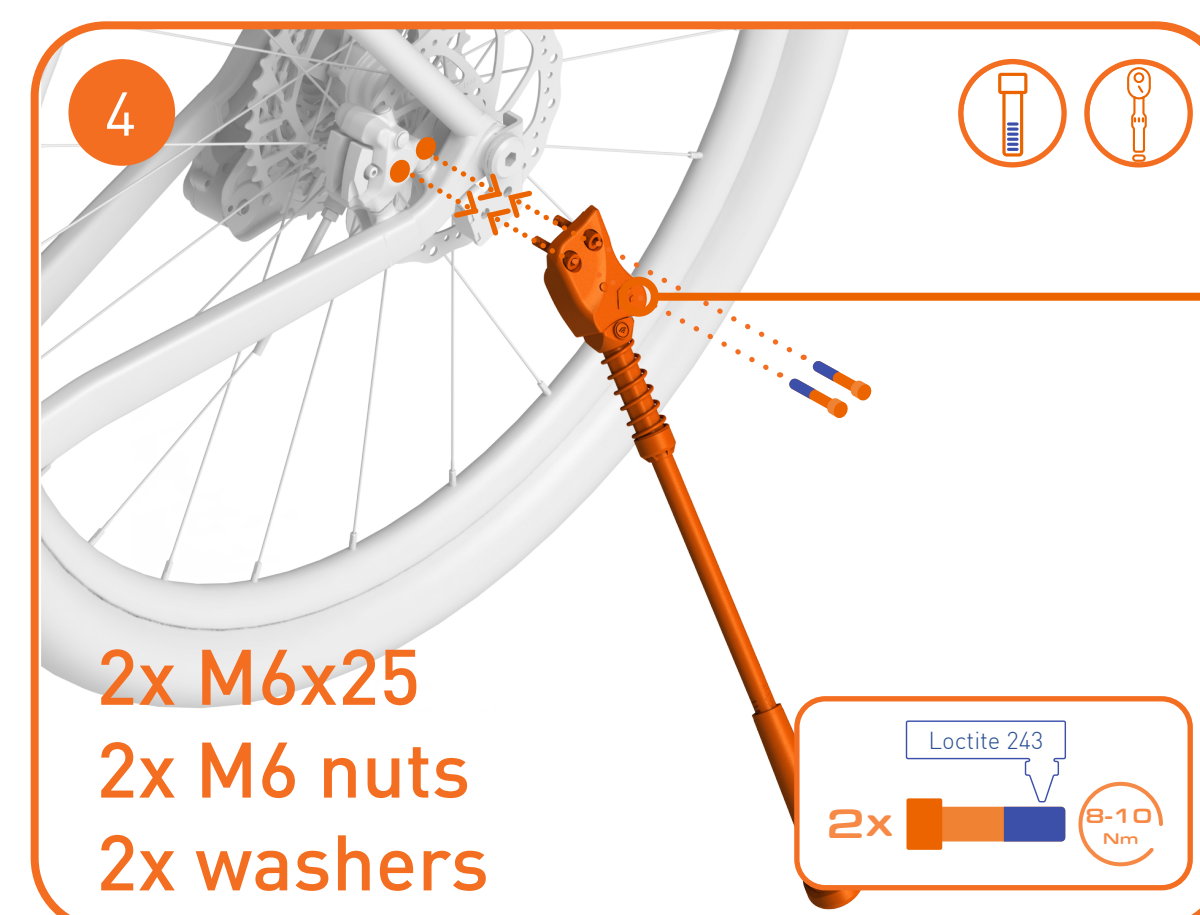

4
Now you can fit most common side stands with a KSA 18 direct mount in accordance with the manufacturer's specifications.

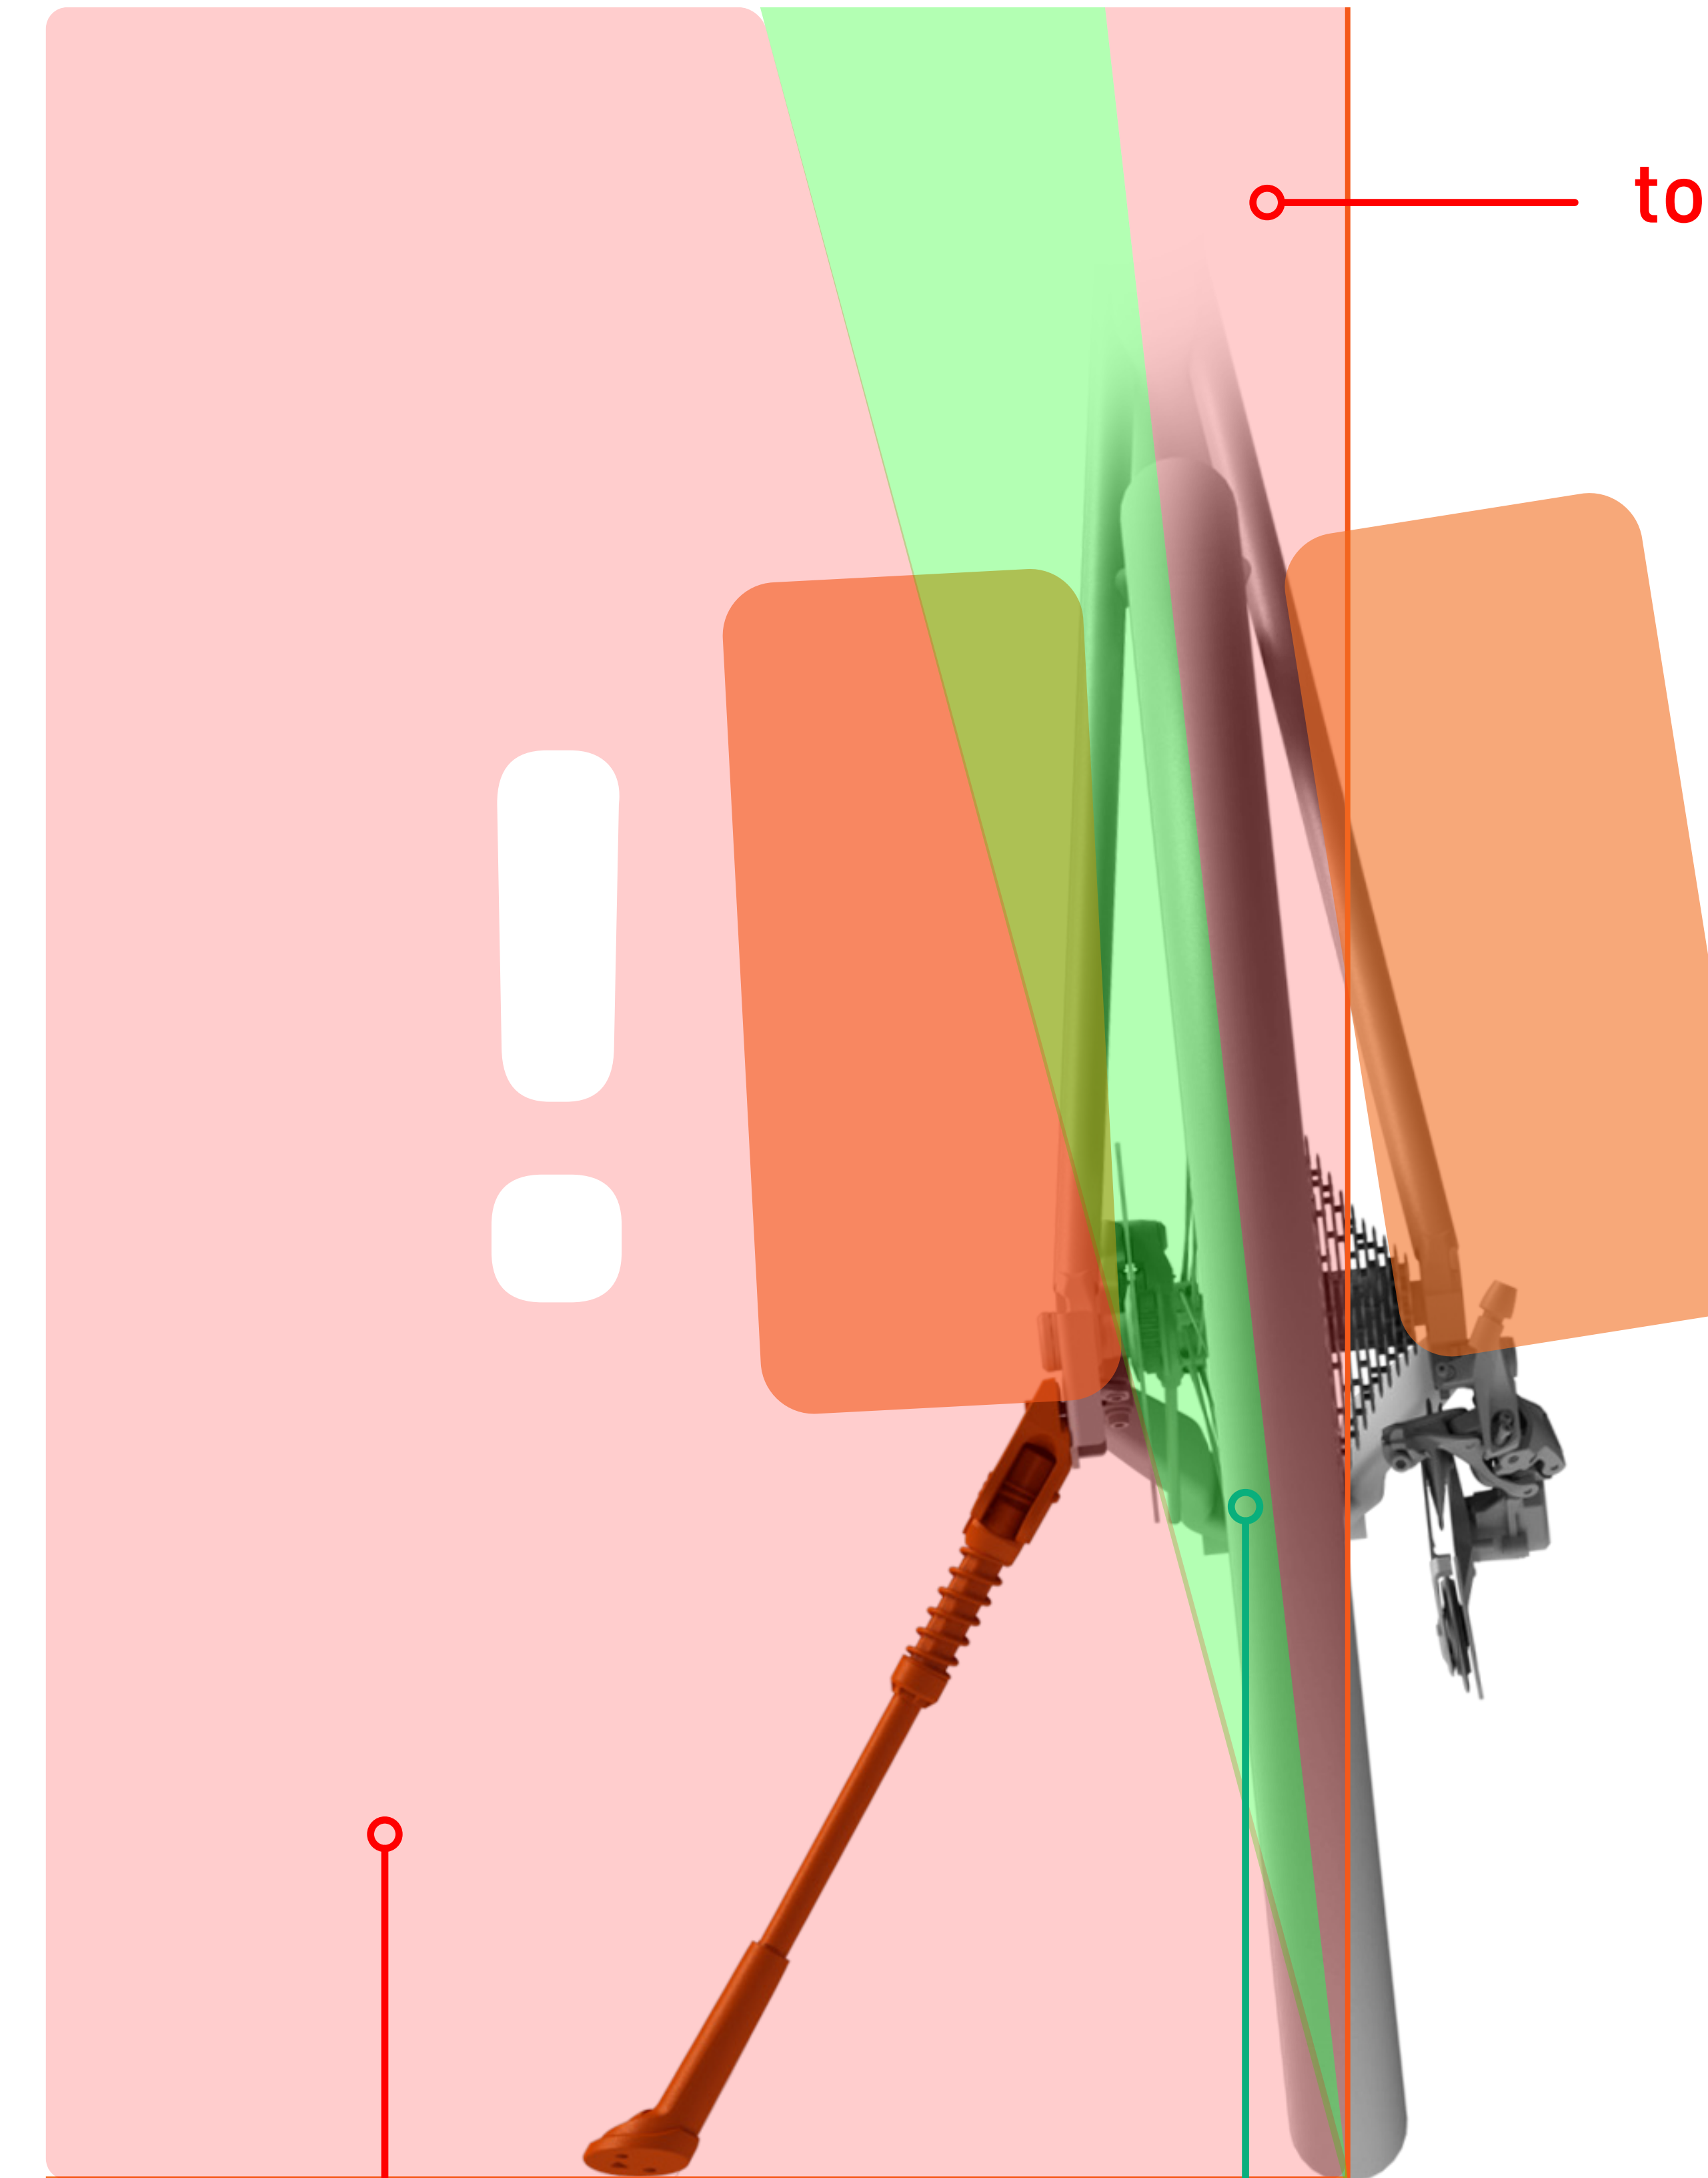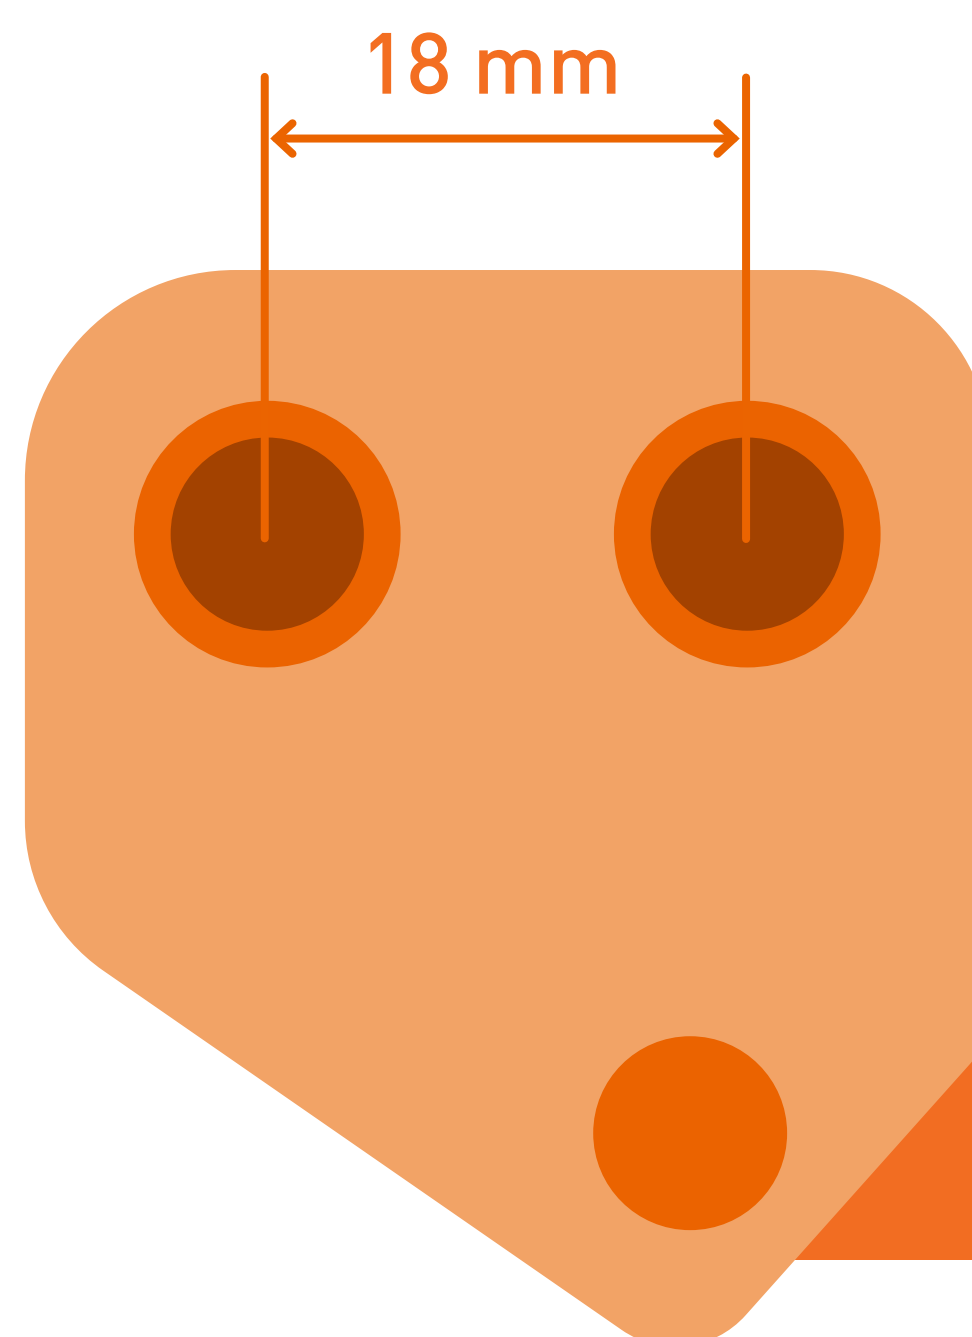

too flat!

optimum
stability!

too steep!



Make sure that you adjust the side stand correctly. Make sure that the bike does not stand too steeply or too flat. If the bike stands too steeply or too flat, there is a danger that it will topple over.

Test the stability of the bike with luggage and panniers fitted.

Note the permissible load of the side stand! You can find this in the manufacturer's instructions!