



FRONT BASKET PRO

Assembly instructions and notes



INSTRUCTION



CONFIGURATOR

Edition 14.01.2026
 VELO DE VILLE
 AT-Zweirad GmbH
 Zur Steinkuhle 2
 48341 Altenberge

Content:

These instructions show how to assemble and use the VELO DE VILLE Front Basket Pro for all VELO DE VILLE Pro models, KEB Classic and LOADY.

ALWAYS use a screw lock when installing screws. Preferably in the form of LOCTITE 243.



1x Front Basket Pro
982-60-00002



1x Anti-slip mat
179-50-00036

•Screws
DIN 912
4x M5 x 30 mm

•Washer
DIN 9021
4x 5,3 x 15 x 1,2 A2



1x HT Bottleholder L+R
189-60-00311

MUST be ordered separately!



1x Lightning bracket
919-01-00008




2x Reflective strip
930-10-00010

! The VELO DE VILLE Front Basket Pro has a base area of 40 x 30 cm.

! 10kg max. The VELO DE VILLE Front Basket Pro may be loaded with a maximum of 10 kg.

! Secure your load before every journey!

! The light source is lowered. This creates a shadow in the light cone. The distance between the Frontkorb Pro and the light source must be adjusted using the spring travel of the suspension fork!

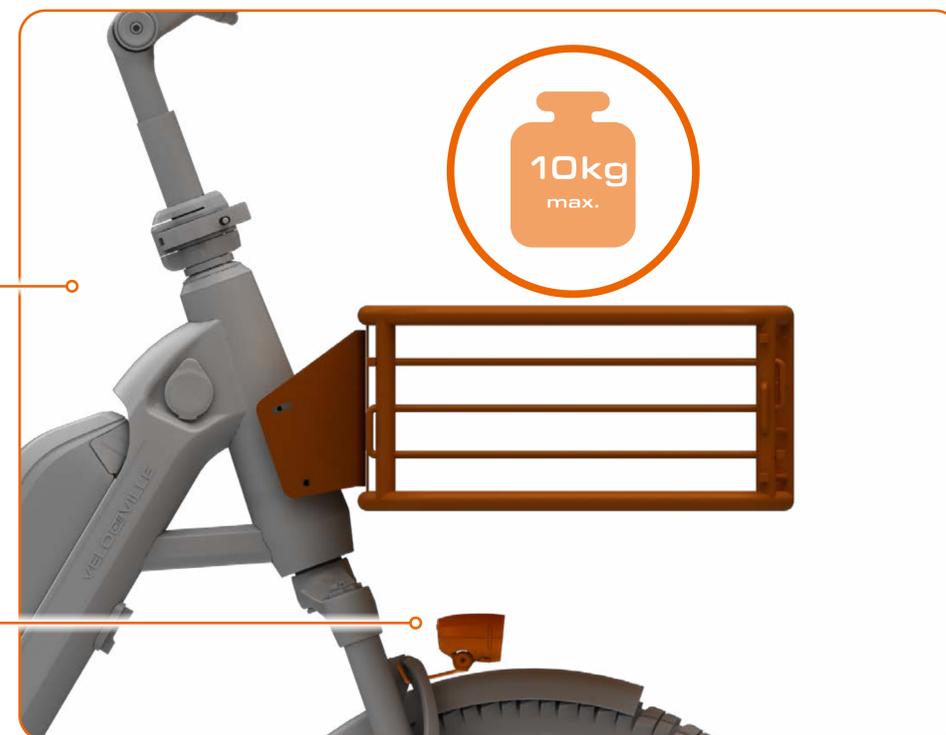

Replace the light bracket; the white reflector is replaced by the reflector strips. To do this, dismantle the front light and remove the bracket.



Fit the new light bracket and attach the reflectors to the front of the fork legs. Align the light and adjust the cable routing. Secure the mudguard!




Adjust the light cone. After installing the Front Basket Pro, check that there is no contact with the Front Basket Pro at maximum suspension travel!



Position the HT bottle holders L+R and the front basket as shown.




Then tighten the LOWER screws (10 Nm) with using a washer in between. The UPPER screws are loosely screwed in.

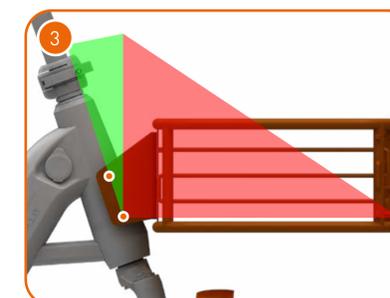

Now align the FRONT BASKET PRO horizontally with the floor. The FRONT BASKET PRO must not be tilted forwards! Then tighten the TOP screws (10 Nm).



To prevent your load from slipping, you can use the mat provided.

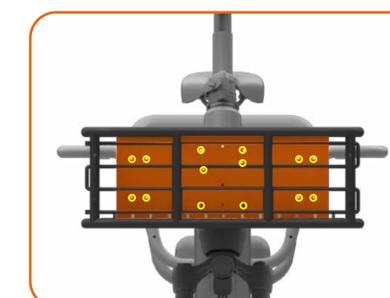

The rear wall of the VELO DE VILLE Front Basket Pro has several hole patterns spaced 64 mm apart for mounting standard bicycle accessories.

